


Read all instructions before assembly and use. **KEEP INSTRUCTIONS FOR FUTURE USE**.

A ADULT ASSEMBLY REQUIRED

Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete.

3 DRAWER CHEST with HUTCH

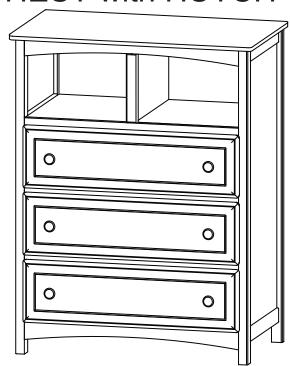

THIS PRODUCT IS NOT INTENDED FOR INSTITUTIONAL OR COMMERCIAL USE.

Consumer Care:

www.DeltaChildren.com

Delta Children's Products 114 West 26th Street New York, NY 10001 Tele.212-645-9033

Style #:	_			
Lot:				
Date:				
		 REV	/ FAC	TORY

When contacting Delta Consumer Care you will need to reference the above numbers. They can also be found on the label on the Back Panel.

To register your product for important safety alerts and updates to your product please visit **www.DeltaChildren.com** and click on Product Registration.

△WARNING:

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- •Place heaviest items in the lowest drawers.
- •Unless specifically designed to accommodate, **do not** set TV's or other heavy objects on the top of this product.
- •Never allow children to climb or hang on drawers, doors,or shelves.
- •Never open more than one drawer at a time.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.


- ·Always monitor your child's activity when in the nursery.
- ·Do not allow standing in drawers.
- **Do not** allow standing on top of this product.
- -Accessory Items must be securely fastened to this product according to the instructions provided with those items.
- •To avoid head injury, do not allow children to play underneath open drawers.
- -Do not leave drawers open when not in use.


NOTES ON ASSEMBLY:

- -During the assembly process whenever using screws or bolts, check each by placing the screw/bolt on the diagram of the item which is drawn actual size and design. Be sure to use the proper size and shape specified in the instructions.
- -To assemble this unit you may be required to place the unit on it's side and face. It is strongly recommended that assembly is done on a soft, non-abrasive surface to avoid damaging the finish.


NOTES ON CARE AND MAINTENANCE:


- Do not scratch or chip the finish.
- Inspect the product periodically, contact delta children's products for replacement parts or questions.
- **Do not** store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- -To preserve the luster of the high quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- -Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- -Do not use abrasive chemicals.
- -Do not spray cleaners directly onto furniture.
- -Lift slightly when moving on carpeting to prevent leg breakage.
- -Use of a vaporizer near furniture will cause wood to swell and finish to peel.

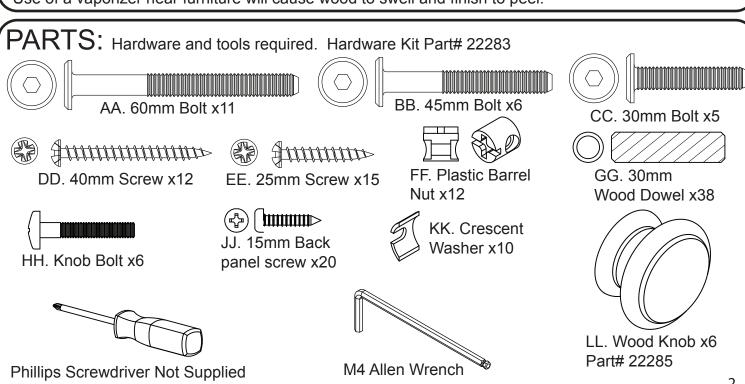

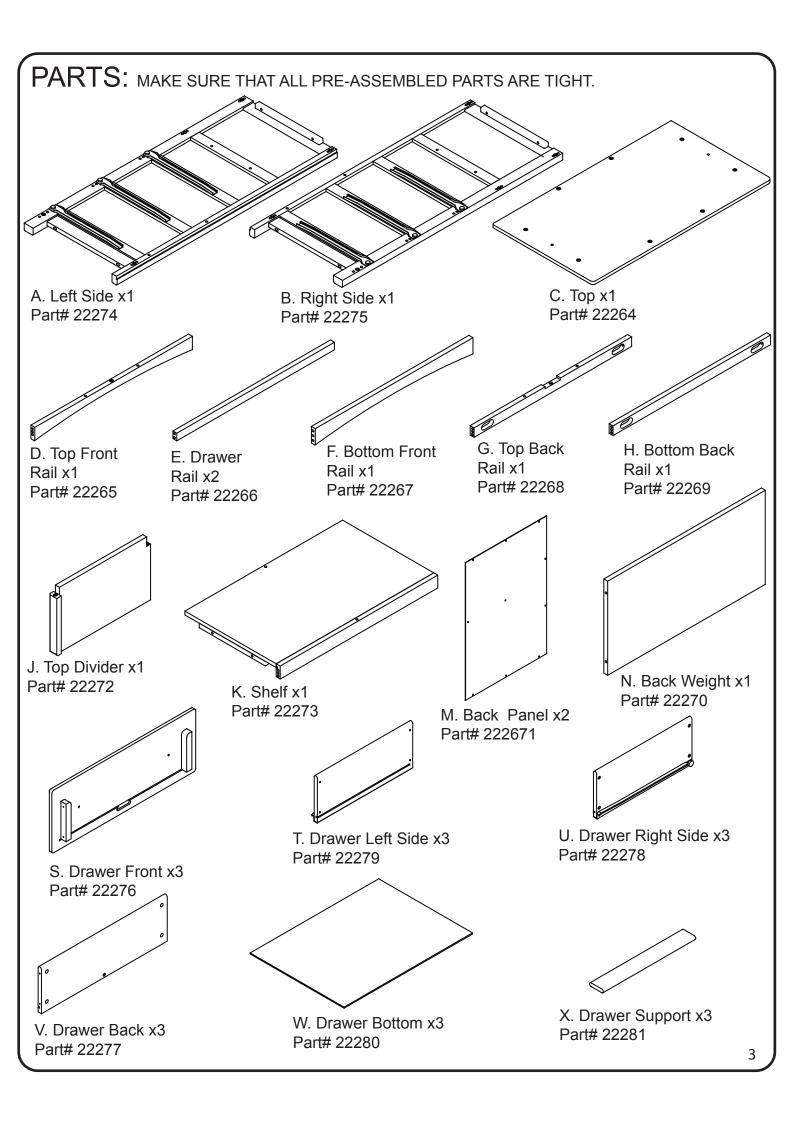


HARDWARE SYSTEM - REVIEW BEFORE ASSEMBLY

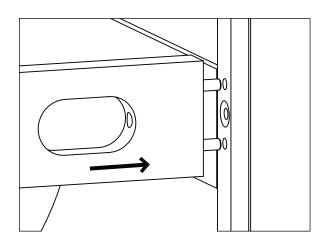


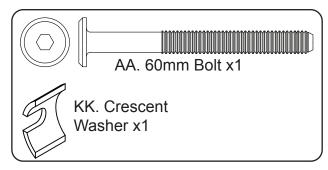

Insert the Dowels in the Rail into the holes in the Post.


Insert the Bolt into the slot. Turn clockwise with fingers or the Allen Wrench provided. **Do not** fully tighten, leave 1/2" (12mm) exposed.

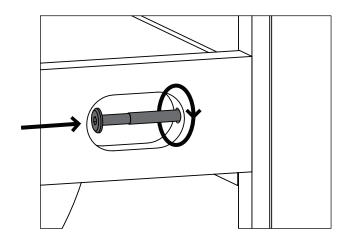


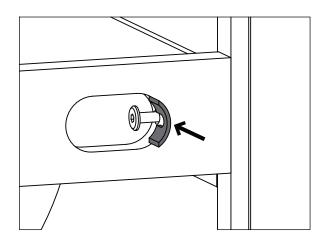


Slide the Crescent Washer over the exposed bolt, behind the head of the bolt. Tighten the bolt with the Allen Wrench provided.

Install (1) Bolt and (1) Crescent Washer at a time. Tighten until it looks like the picture.

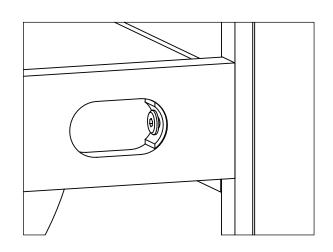


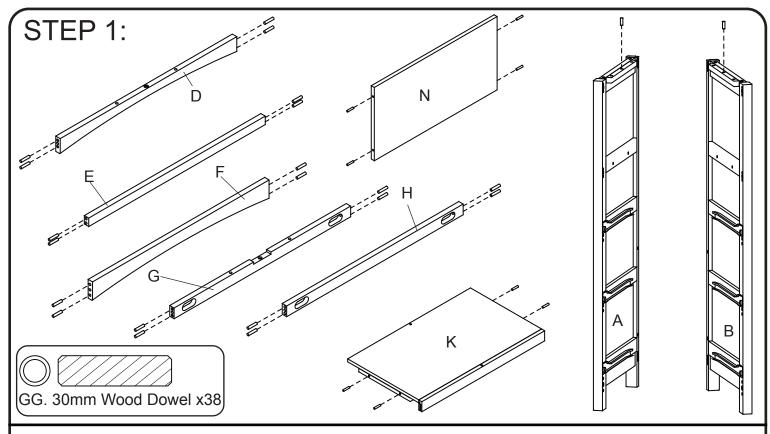




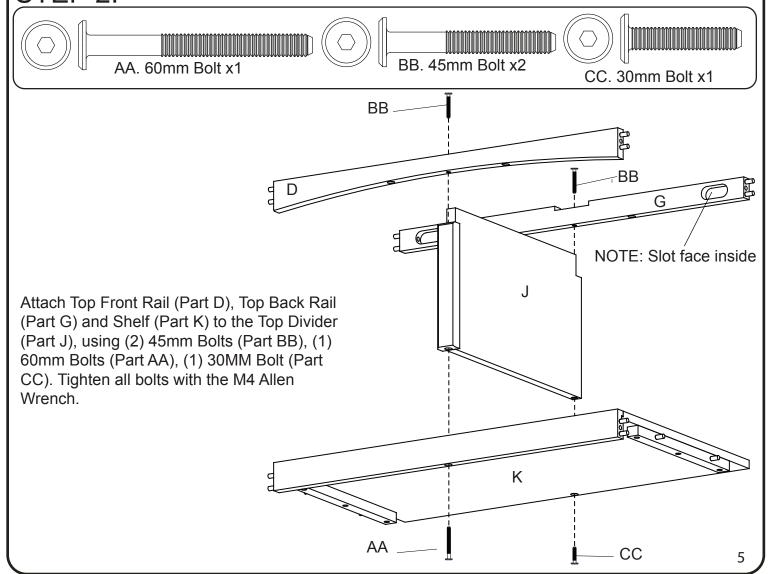



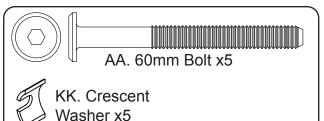


Attach the Assembly from Step 2, the Bottom Front Rail (Part F) and the Bottom Back Rail (Part H) to the Left Side (Part A) using (5) 60mm Bolts (Part AA) and (5) Crescent Washers (Part KK), following the detailed directions on page 4. Insert the Bottom Back Panel (Part N) and (2) Drawer Rails (Part E) as shown.

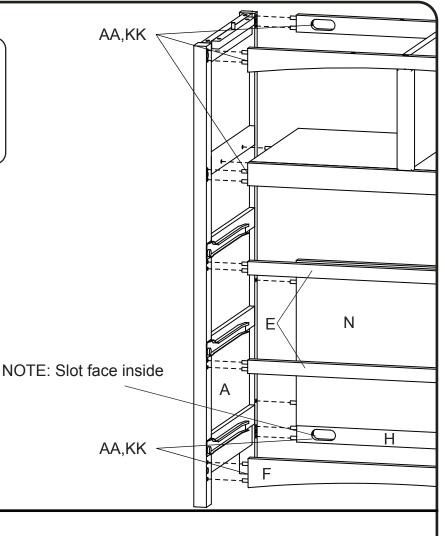


STEP 4:



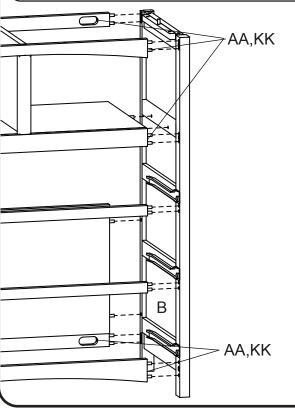


 Attach the Right Side (Part B). Carefully align all dowels with the holes in the side. Attach using (5) 60mm Bolts (Part AA) and (5) Crescent Washers (Part KK), following the detailed directions on page 4. Ensure ALL bolts are tight.






Attach the Top Panel (Part C) to the case. Ensure (2) Dowels from the sides are aligned properly before installing any bolts. Install (4) 45mm bolts (Part BB) through the Top Front and Back Rails, then install (4) 30mm Bolts (Part CC) through the sides. Tighten all bolts with the M4 Allen Wrench.

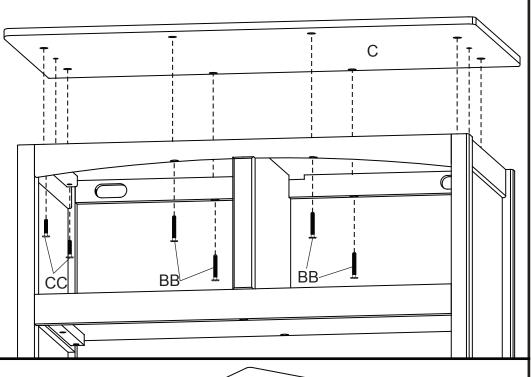



STEP 5:



Attach (2) Back Panels (Part M) using (20) Back panel Screws (Part JJ). Ensure the Product Label on the Back Panel faces outward. Tighten with a Phillips screwdriver.

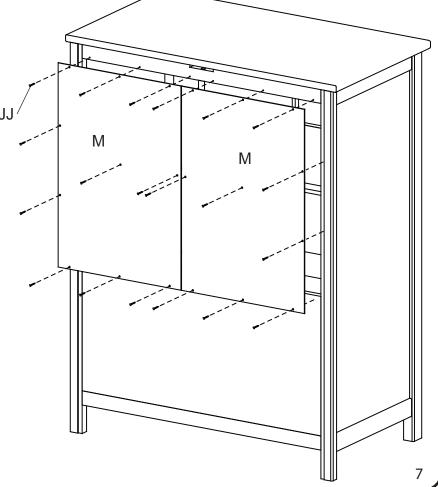

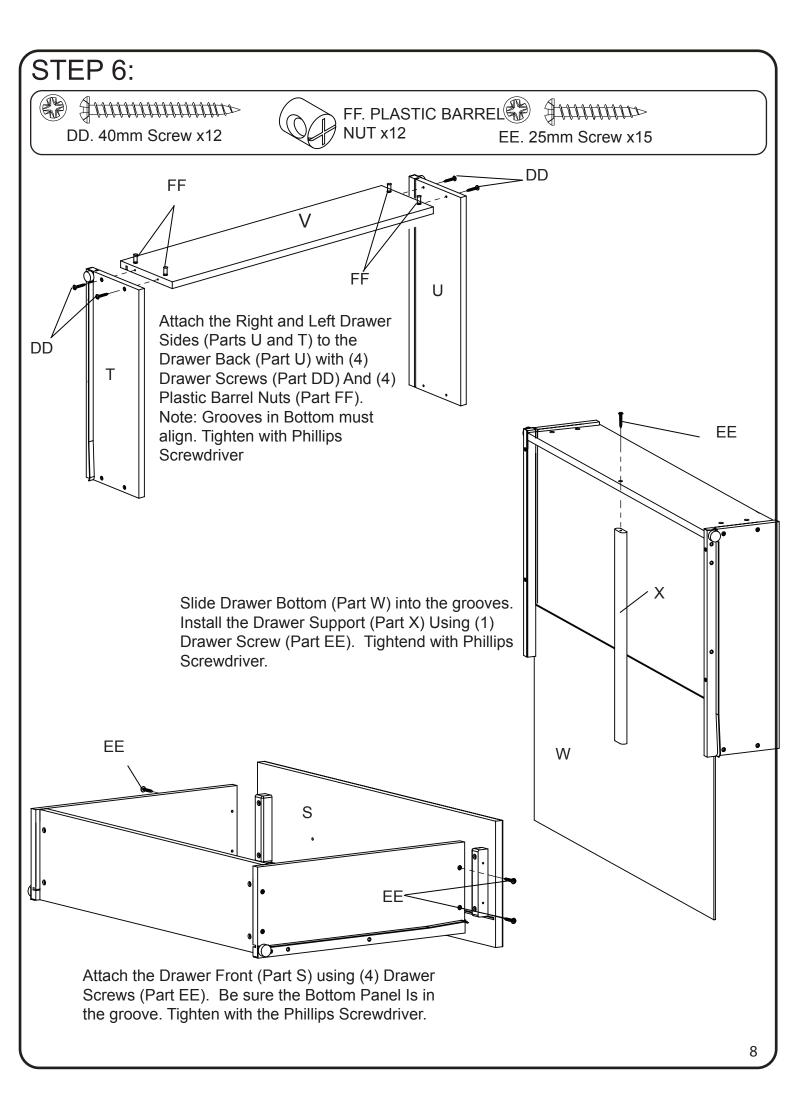

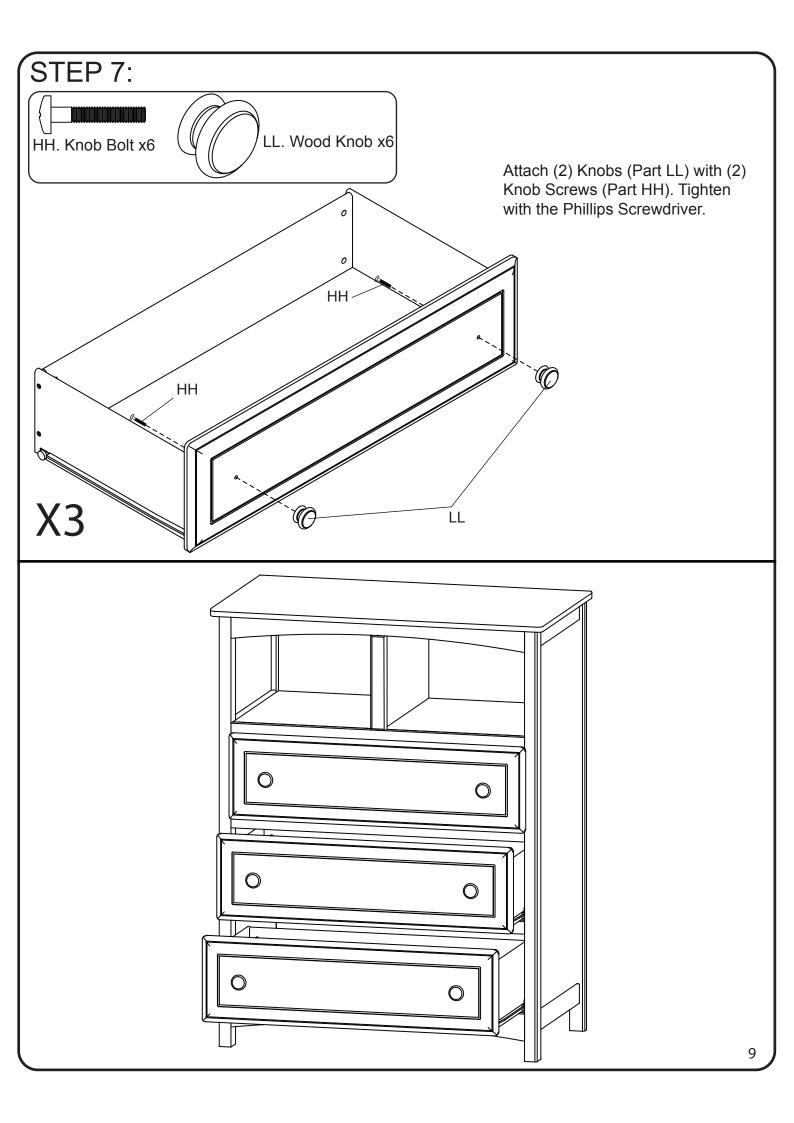



Children's Products

Consumer Care: www.DeltaChildren.com Delta Children's Products 114 West 26th Street New York, NY 10001 Tele.212-645-9033

Warranty: This Delta Case is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta.

Please visit **www.DeltaChildren.com** and click on Product Registration to register your product for important safety alerts and updates.

For questions or comments, please log on to **www.DeltaChildren.com** and click Consumer Care, or contact us by phone at (212) 645-9033.

In the event that you need to contact our Consumer Care department please have the Style Number and Lot Number available. If they are not printed below they can be found on the label on the Back panel.

Use the space below to make note of those numbers.

STYLE No: 70863-	COLOR	REV FACTORY
Lot No. :		
Pack Date:		
Date of Purchase:	(you sho	uld also keep your receipt)