TOUR VANTAGE STROLLER

ASSEMBLY INSTRUCTIONS
ADULT ASSEMBLY REQUIRED

SIMMONS KIDS®

Styles and colors may vary

IMPORTANT: Read all instructions before assembly and use of the stroller
Keep the instructions for future reference

Customer Care Tel. 1-(800)-218-2741

(H)

www.DeltaChildrensProducts.com
DCP Cat # 07-06-11-V8

Consumer Information

WARNING

Prevent serious injury from falls or sliding out:

- ALWAYS use the restraint system.
- Only children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- NEVER leave child unattended.
- DO NOT use the storage bag to carry children.

To prevent product from tipping over:

- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the storage bag.
- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cup holder.
- DO NOT place additional items on this product, except as recommended in the instructions.

To prevent injury:

- Make sure all body parts are clear of the stroller when folding and unfolding.
- DO NOT place hot liquids in the cup holder. Hot liquids can burn your child.

- **Please read these instructions before assembly and use of this product.**
- **Adult assembly is required.**
- **Use only for a child who weighs less than 40 lbs (18.14 kg).**
- **Maximum weight limit for the storage bag is 3 lbs (1.36 kg).**
- **Maximum weight limit for the cup holder is 3 lbs (1.36 kg).**
- **Product features and decorations may vary from the photo.**

Care

- **The plastic parts may be wiped clean using a mild cleaning solution and damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.**
- **To keep your stroller wheels from squeaking, use a silicone or graphite based lubricant.**

Customer Service
Tel. 1-(800)-218-2741
www.DeltaChildrensProducts.com
customerservice@DeltaChildrensProducts.com

MADE IN CHINA

Assembly

IMPORTANT! Before assembly or each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts.

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.

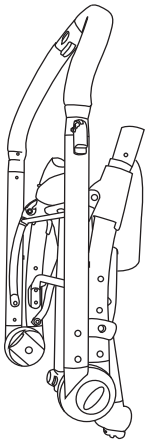

Folded Stroller Frame

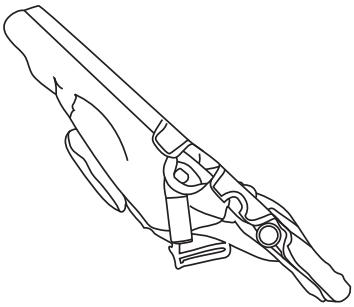

Folded Seat



Bumper Bar

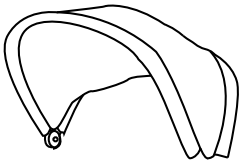

Folded Canopy



Rear Wheel Axle

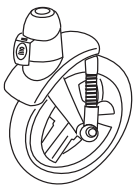

Front Swivel Wheels X 2

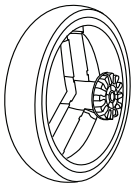

Rear Wheels X 2

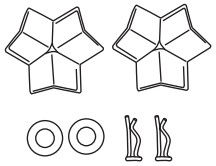

Rear Wheel Attachment Hardware

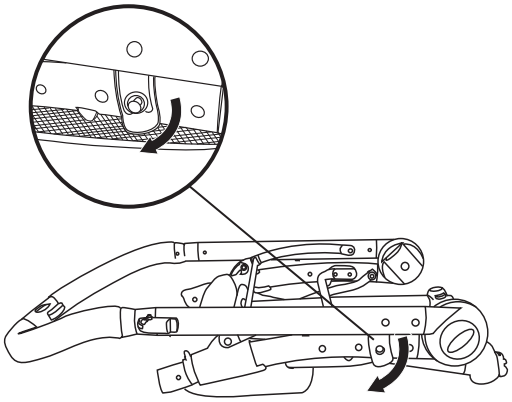

1

Opening Stroller

- Locate the latch clip on the side frame of the stroller.
- Pull to release the latch clip.

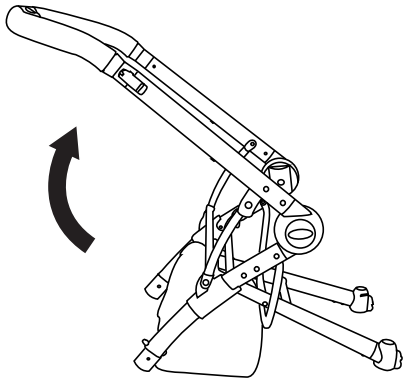

2

- Grab the handle and lift up to unfold the stroller with the other hand.

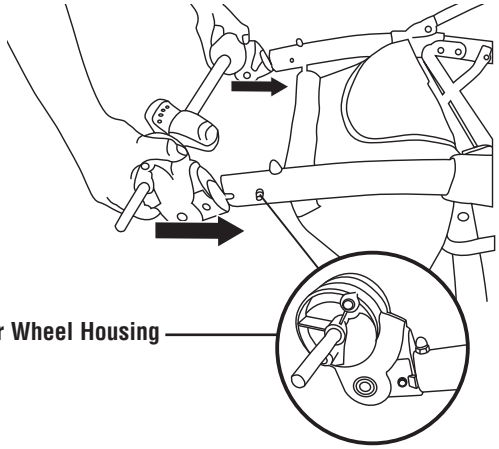

3

Attaching Rear Wheel Axle

- Locate the rear wheel axle and the stroller frame.
- Insert the rear wheel housing onto the rear frame support
- Push the rear wheel housing until you hear it "click" into the locked position.
- Pull down on the rear wheel axle to assure it is properly locked into position.

Assembly

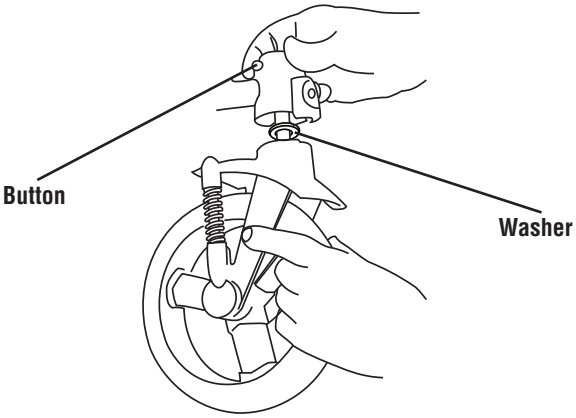

4

Attaching Front Swivel Wheels

- Locate the legs on the front of the stroller. (as pictured above)
- Attach the front wheel unit to the front of the stroller leg, push up on the wheel unit until you hear it "click" into the locked position.
- Pull on the front wheel assembly to make sure it is securely attached to the front leg.
- Repeat this procedure to attach the other front wheel assembly.

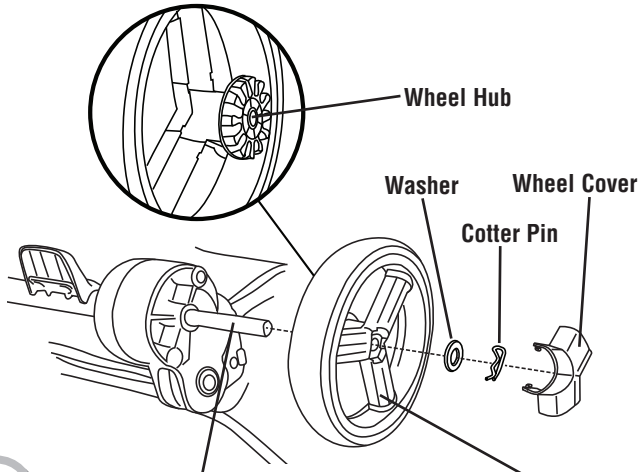

5

Attaching Rear Wheels

- Locate the rear leg on the back of the stroller and the rear wheel, align the rear wheel with the rear leg as pictured above.
- Remove the cotter pin and washer, then slide the wheel onto axle with the wheel hub facing the stroller, Slide on the washer, insert straight side of cotter pin through the hole in the axle.
- Then snap on the rear wheel cover until you hear a "click".
- Pull on the rear wheel assembly to make sure it is securely attached to the rear leg.
- Repeat this procedure to attach the other rear wheel assembly.

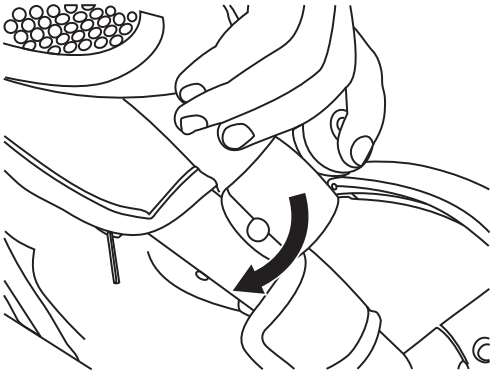

6

Attaching Canopy

- Locate the canopy and align the canopy holes on the canopy fixture with the fixing rivets on the handles.
- Press down the canopy until it "clicks" into the locked position.
- Check to make sure the canopy is properly attached.

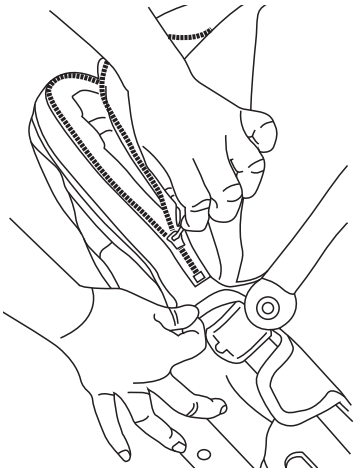

7

- Locate the zipper on the rear edge of the canopy and the top of the seat.
- Zipper the canopy closed.

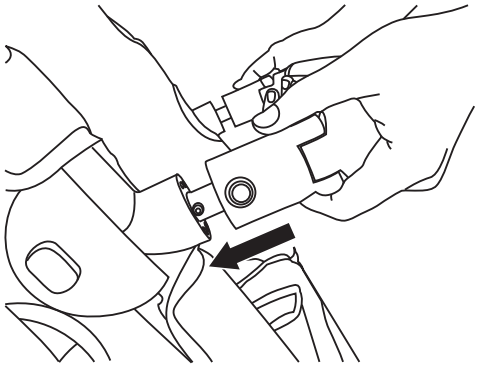

8

Attaching Bumper Bar

- Locate the bumper bar and align the bumper bar pegs with holes in front of the seat unit.
- Insert the bumper bar until you hear it "click" into the locked position. Pull out on the bumper bar to make sure its securely attached.

Setup and Use

WARNING

Prevent serious injury from falls or sliding out:

- ALWAYS use the restraint system.
- Only children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- NEVER leave child unattended.
- DO NOT use the storage bag to carry children.

To prevent product from tipping over:

- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the storage bag.
- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cup holder.
- DO NOT place additional items on this product, except as recommended in the instructions.

To prevent injury:

- Make sure all body parts are clear of the stroller when folding and unfolding.
- DO NOT place hot liquids in the cup holder. Hot liquids can burn your child.

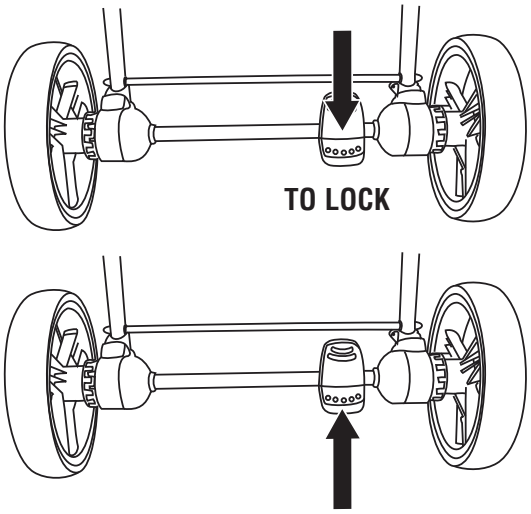

1

To Lock Rear Wheel

- **Step down the brake pedal until it "clicks" into the locked position.**

NOTE: Make sure the break pedals are pressed down completely.

To Unlock Rear Wheel

- **Lift up the brake pedal until it "clicks" into the unlocked position.**

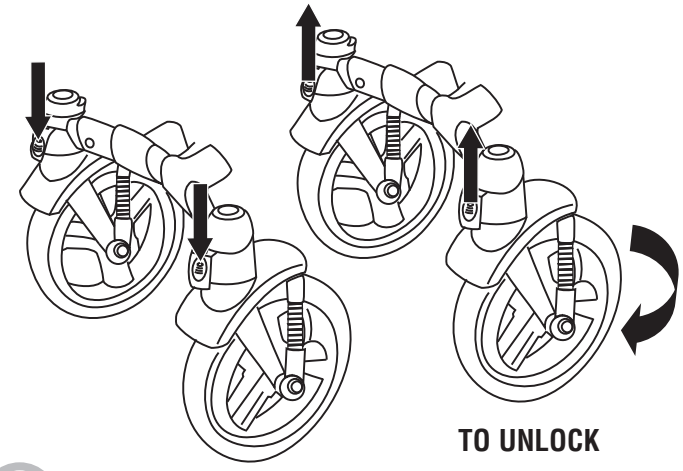

2

To Lock Front Swivel Wheel

- **Press both swivel lever down until they "click" into the locked position.**

NOTE: Make sure the break pedals are pressed down completely.

To Unlock Front Swivel Wheel

- **Lift both swivel lever up until they "click" into the unlocked position and the front wheels are free to swivel.**

Setup and Use

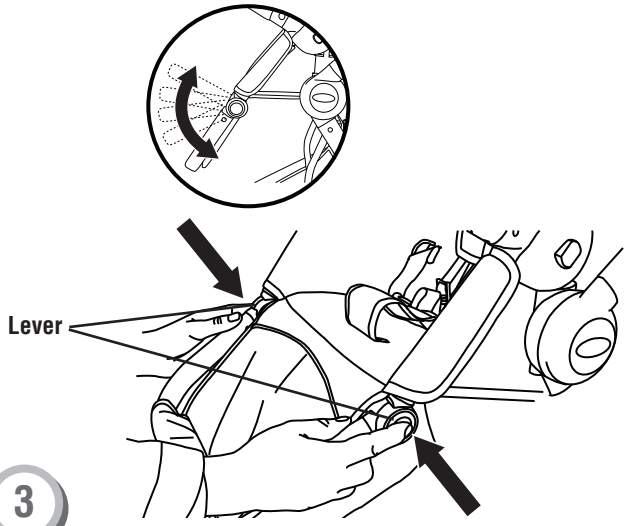

3

To Adjust the Calf Rest

- **The calf rest can be adjusted up or down for the child's comfort.**
- **To adjust the calf rest press the lock button on both sides of the seat and adjust the calf rest to the desired position.**

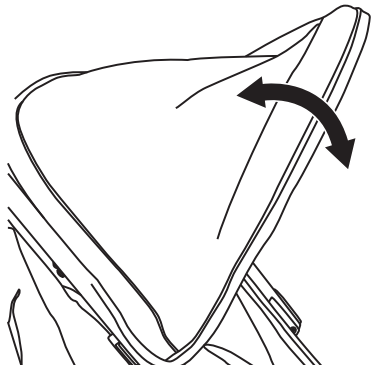

4

To Adjust the Canopy

- **Fold/unfold canopy by grabbing anywhere on the edge of the canopy.**

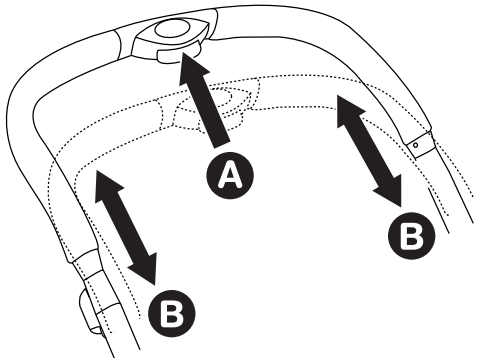

5

To Adjust the Handle

- **Ⓐ Press the buttons and Ⓑ adjust the handle to desired position.**

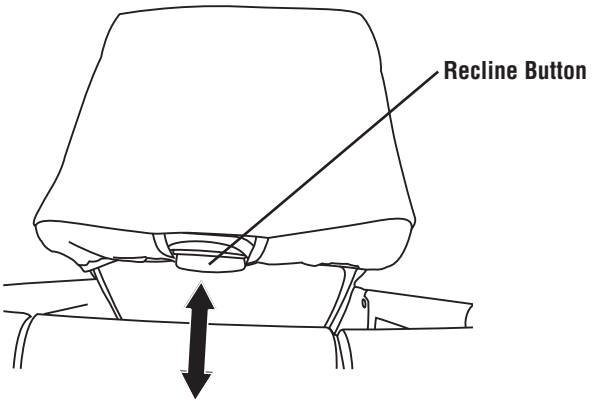

6

To Adjust the Seat Back

- **Press down the recline button, pull up or pull down the backrest gently to the desire height.**

NOTE: It is recommended that the backrest is in the upright position before folding the stroller.

Securing Child

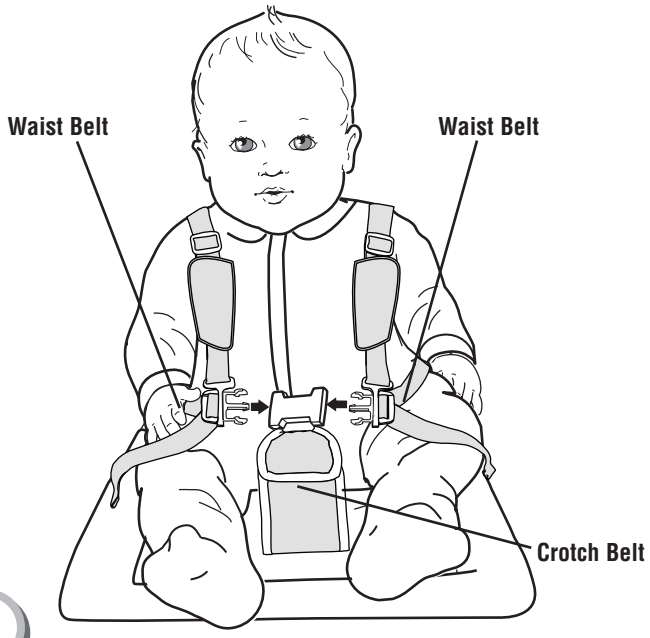

1

Securing Child

- Place your child in the stroller. Position the crotch belt between your child's legs.
- Pull shoulder straps over child's arm and shoulder and fasten **both** strap ends to the restraint system.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a **"click"** on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

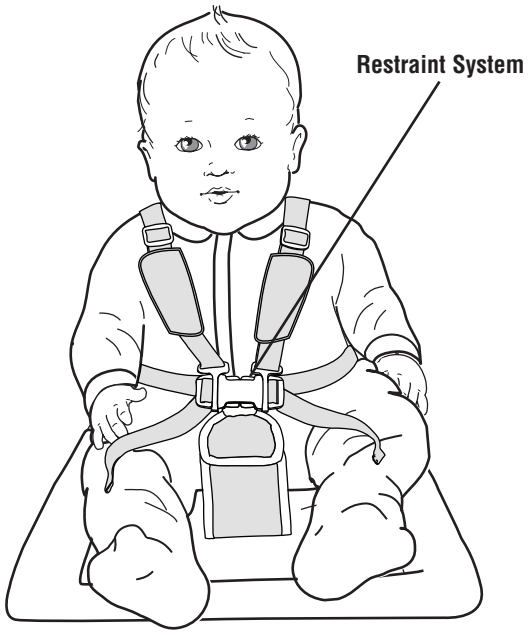

2

- Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.

  Please refer to the next section for instructions to tighten the waist belts.

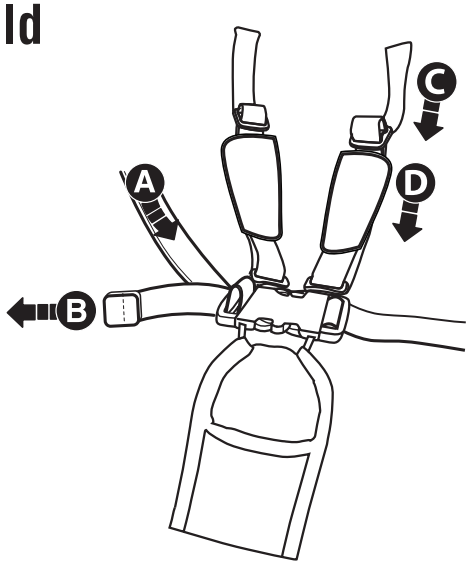

TIGHTEN

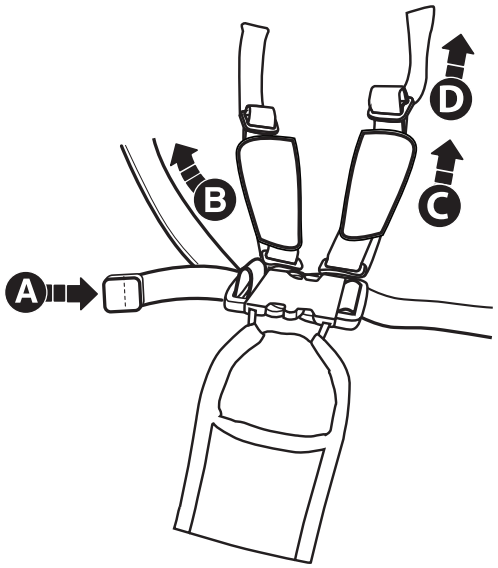

3

LOOSEN

To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **C**. Pull the bottom end down to tighten the strap **D**.
- Repeat this procedure to tighten the other shoulder strap.

To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop **C**. Pull the top end up to loosen the strap **D**.
- Repeat this procedure to loosen the other shoulder strap.

Please note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Storage

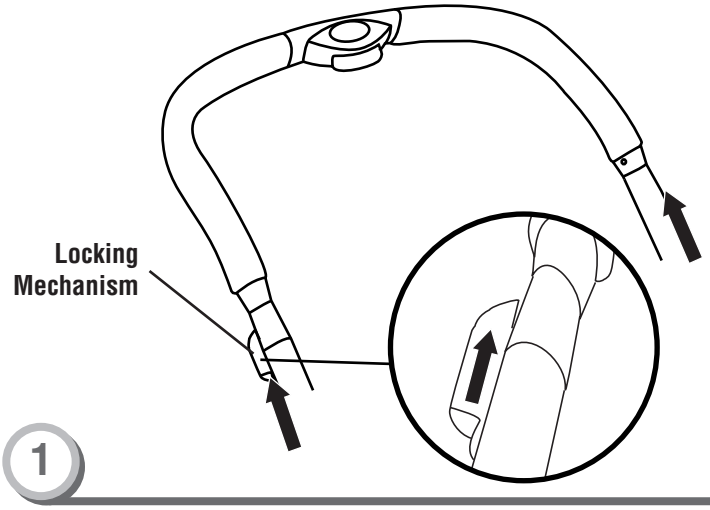

1

- **Unlock locking mechanism on both sides of the handle bar by pulling the levers upwards and pressing down the handle at the same time to fold.**

NOTE: It is recommended that the backrest is in the upright position and canopy is in the folded position before folding the stroller.

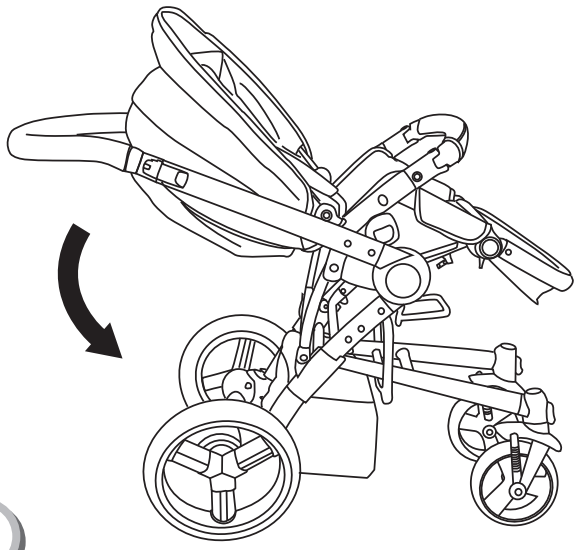

2

- **Press down on handle until the stroller is fully folded position.**

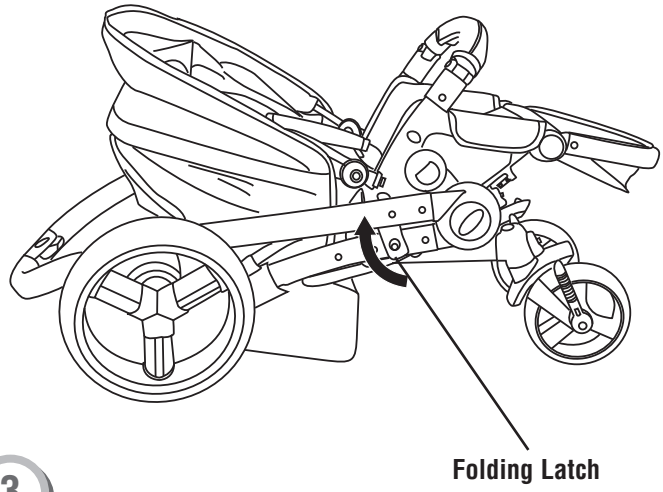

3

- **Ensure the folding latch is locked.**

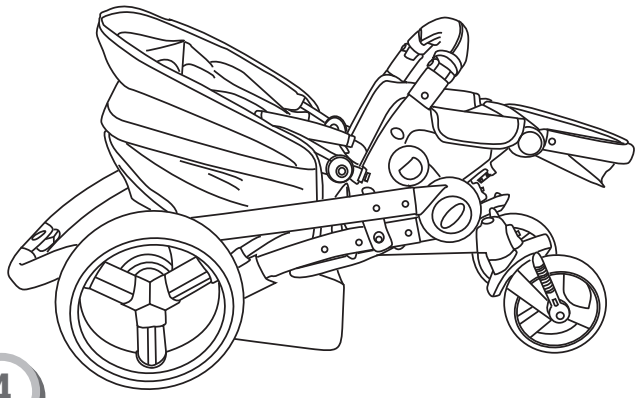

4

- **Your stroller is fully folded into compact size for easy storage and travel.**

To Revers the Seat

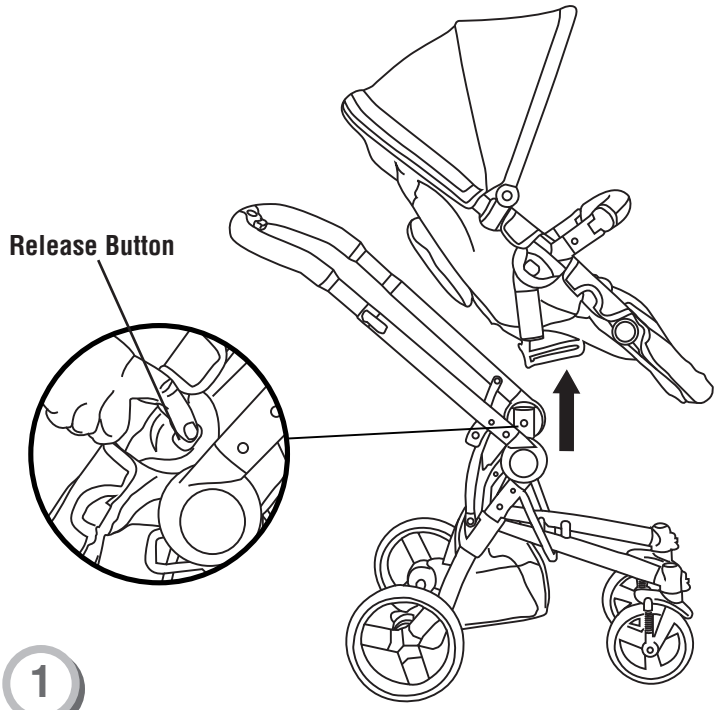

1

To Reverse the Seat

• Press the seat release buttons on both sides of the stroller and lift the seat up until it totally releases from the frame.

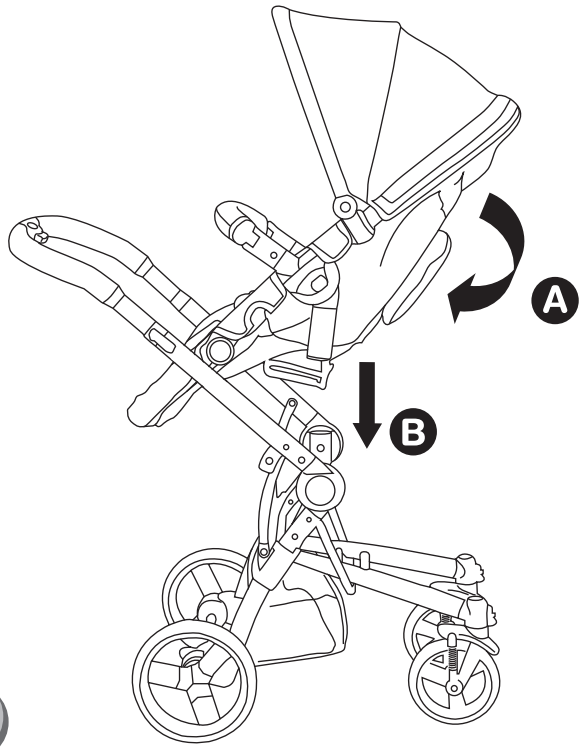

2

• Ⓐ Turn the seat to reverse position and align the seat and frame holes.

• Ⓑ Insert the seat into frame holes until it "clicks" into the locked position.

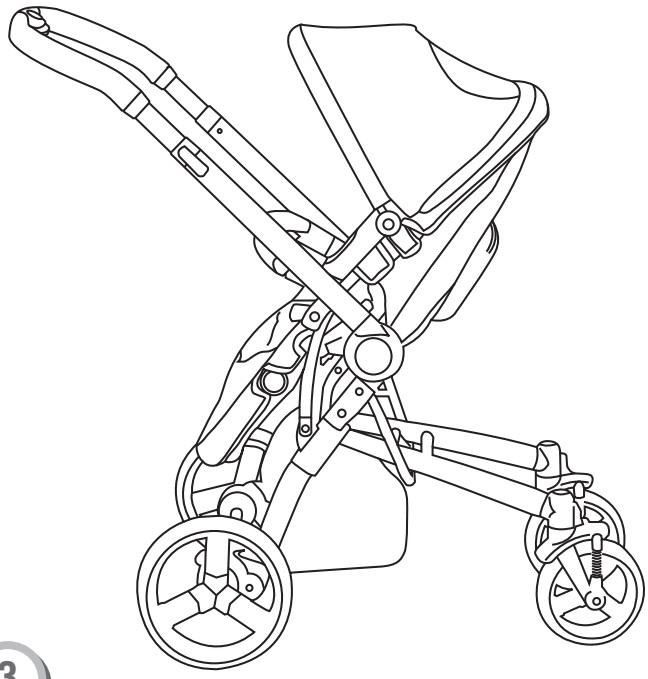

3

• Pull up the seat to make sure it is properly sit in a locked position.

Notes

Notes

Manufactured for and distributed by:

Delta™
Children's Products

114 West 26th Street, New York, NY 10001

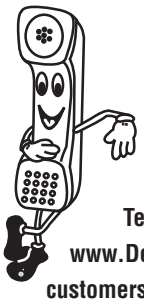

Customer Service
Tel. 1-(800)-218-2741
www.DeltaChildrensProducts.com
customerservice@DeltaChildrensProducts.com

MADE IN CHINA