FLAT FOLD HIGH CHAIR
23002-XXX/299771-XXX FFHCV3

ASSEMBLY INSTRUCTIONS
ADULT ASSEMBLY REQUIRED

Delta™ Children's Products

Styles and colors may vary

Required: Phillips Screwdriver
IMPORTANT: Read all instructions before assembly and use of the High Chair
Keep the instructions for future reference

Customer Care Tel. 1-(800)-377-3777

(C)

www.DeltaChildrensProducts.com
DCP Cat # 12-26-12-V3

Consumer Information

WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF HIGH CHAIR. KEEP INSTRUCTIONS FOR FUTURE USE. INCORRECT ASSEMBLY MAY MAKE THE HIGH CHAIR UNSAFE. FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

WARNING! The child should be secured in the high chair at all times by the restraining system, either in the reclining or upright position. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.

WARNING! Prevent serious injury or death from falls or sliding out.
Always secure child in the restraint.
NEVER leave child unattended.
DO NOT use the high chair until the child can sit up unaided.
DO NOT use the high chair unless all components are correctly fitted and adjusted.
WARNING! Make sure that any harness is correctly fitted.
Only use in a flat stable surface.
Ensure your high chair is fully erected before placing your child inside.
Ensure children are clear of all moving parts before making any adjustments.
NEVER move the high chair with your child inside.
NEVER adjust the seat height with child in high chair.
NEVER adjust the seat recline with child in high chair.
DO NOT allow your child to climb unassisted into, play with or hang onto your high chair. This is not a toy.
IMPORTANT! Before assembly or each use of this high chair, inspect this high chair for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Never substitute parts. Contact Delta Children's Products Customer Service Department at 1.800.377.3777 for replacement parts and instructions if needed.

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.

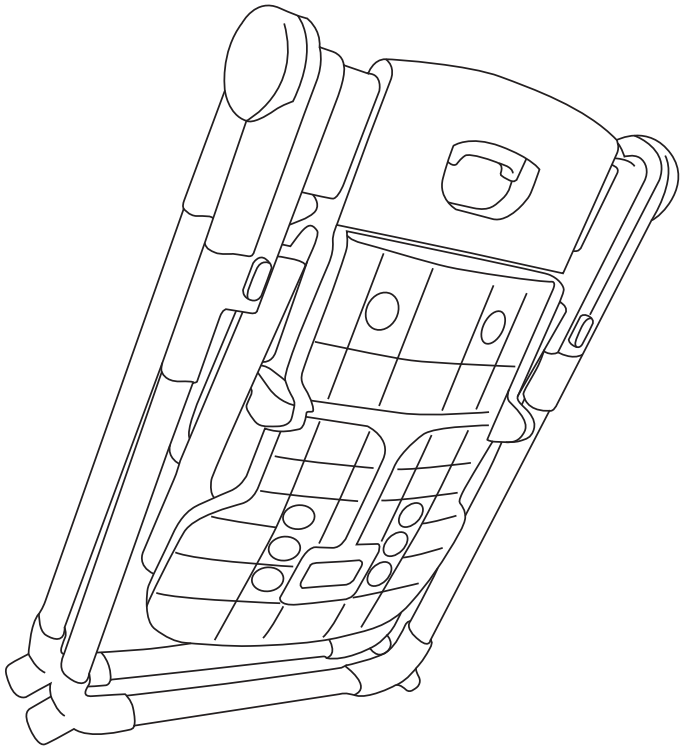

High Chair Frame

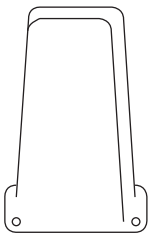

Crotch Restraint

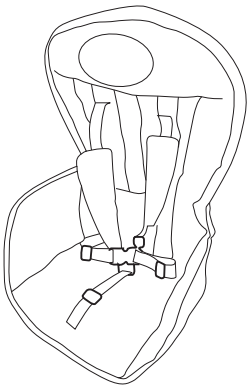

Seat Pad

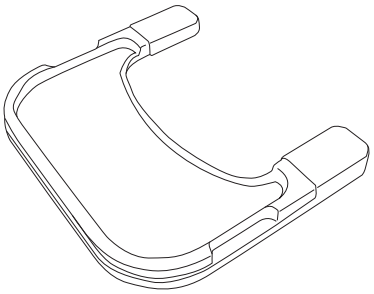

Tray

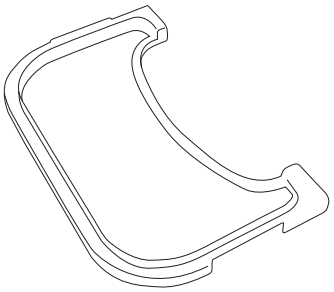

Insert Tray



Screws X4

High Chair Assembly

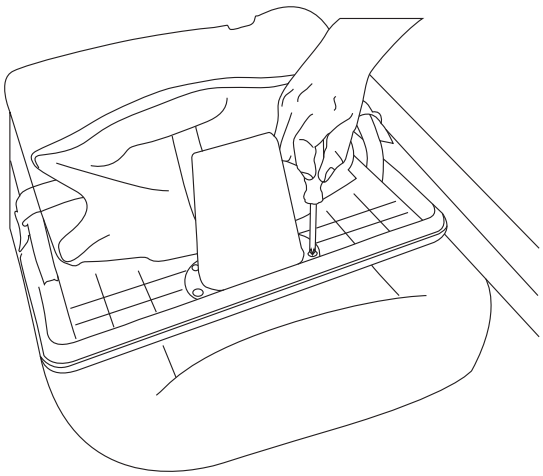

1

- Locate the high chair frame and crotch restraint.
- Place the crotch restraint onto the front tray support.
- Using a Phillips head screwdriver and the screws provided secure the crotch restraint into the bottom of the recess area in the front tray support.

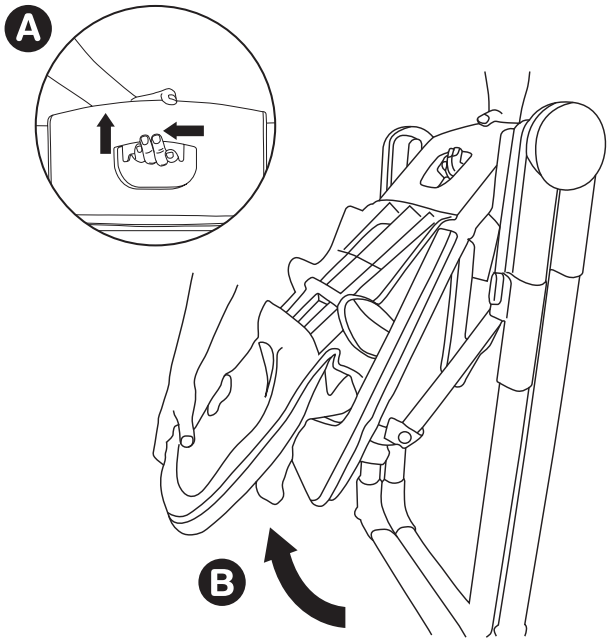

2

- Ⓐ To open the high chair, squeeze the handle as its shown and Ⓑ rotate the seat up until it "CLICKS" into place.

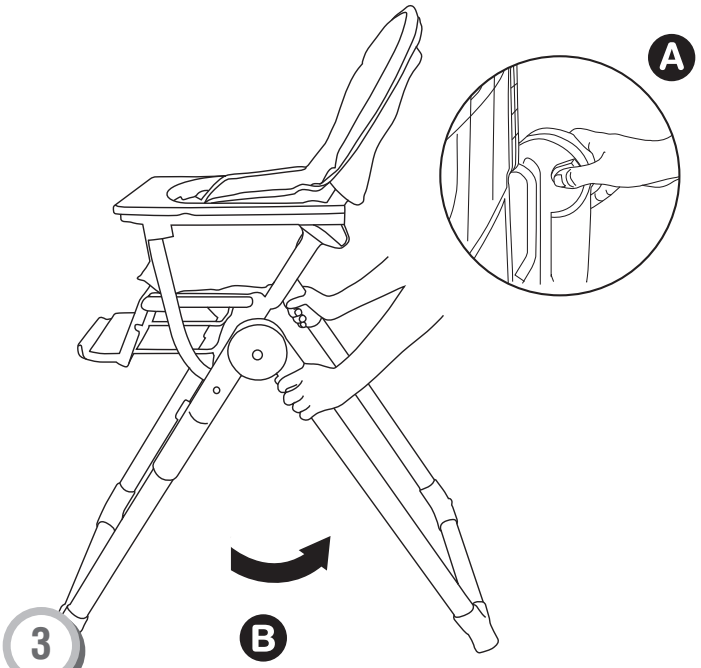

3

- Ⓐ To open legs,locate the leg fold buttons
- Press the two leg fold buttons to release the frame.
- Ⓑ Pull the back legs outward until you hear it "CLICK" into the open position.

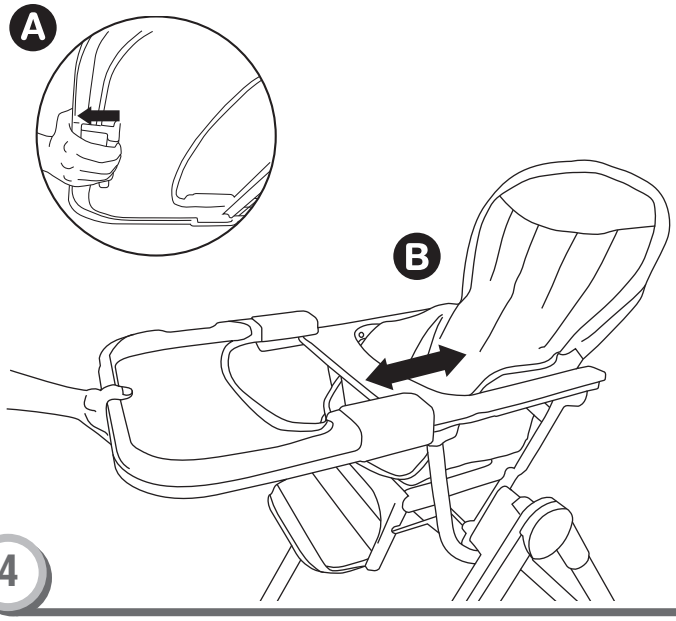

4

- To inset the tray, locate the tray and high chair frame
- Ⓐ Squeeze the tray adjustment mechanism and Ⓑ slide it onto the front tray support. Push the tray in until you hear the tray "CLICK" into the first position.

High Chair Use

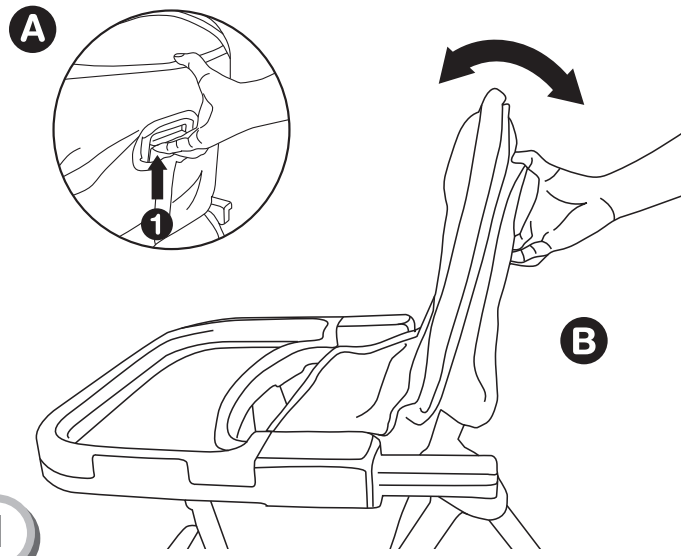

1

- To adjust the backrest, Ⓐ locate the backrest adjustment mechanism on the back of the seat.
- Pull the adjustment mechanism up and Ⓑ adjust the seat back to the desired position.

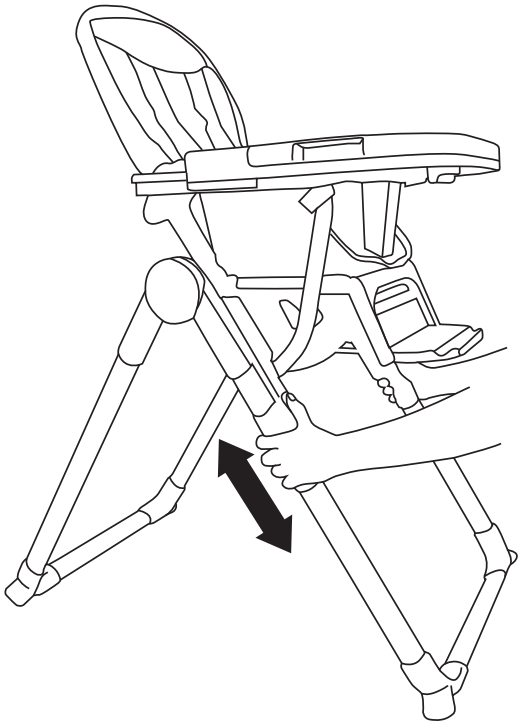

2

- To adjust the high chair height, press the lock buttons on both sides of the seat and lower or higher the seat to desired position.

NOTE: Do not adjust seat height while child is sitting in the chair.

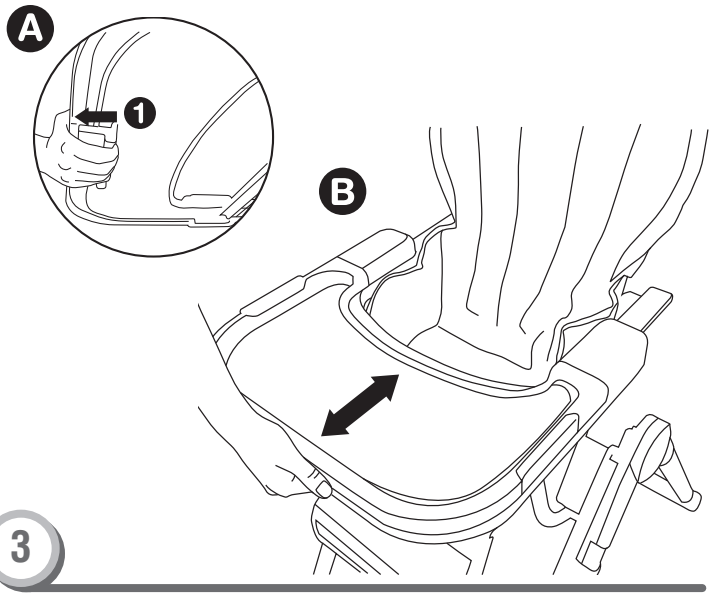

3

- To adjust the tray, Ⓐ locate the tray adjustment mechanism under the front of the tray
- Pull the lock handle away from the high chair and Ⓑ adjust the tray to the desired position
- To remove the dishwasher safe insert tray pull upward from the tray

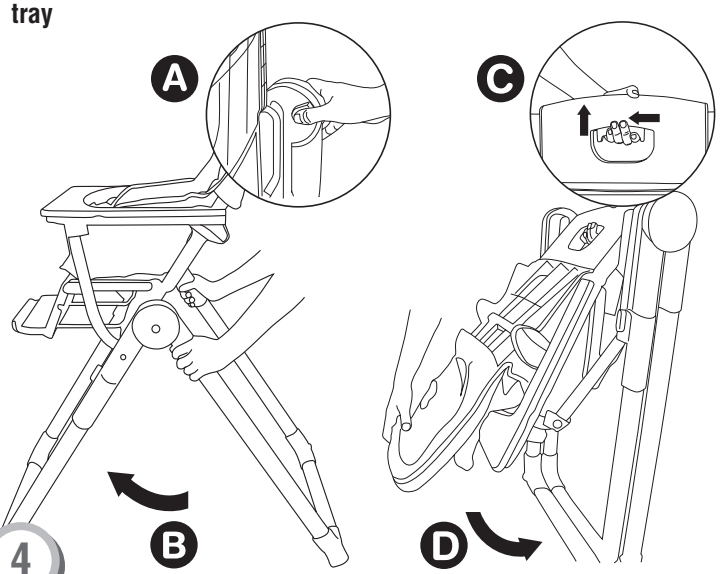

4

- To fold the high chair, Ⓐ locate the leg fold buttons on the inside of the high chair legs.
- Press the two leg fold buttons to release the frame.
- Ⓑ Push the legs inward until you hear them "CLICK" into the folded position.
- Ⓒ Locate the handle lock under the seat, squeeze the handle and Ⓓ rotate the seat down and away until it "CLICKS" in the locked position.

NOTE: 1) Please make sure the seat is in the highest position before folding the highchair.

2) Please make sure the backrest is in the middle position before folding the highchair.

High Chair Use

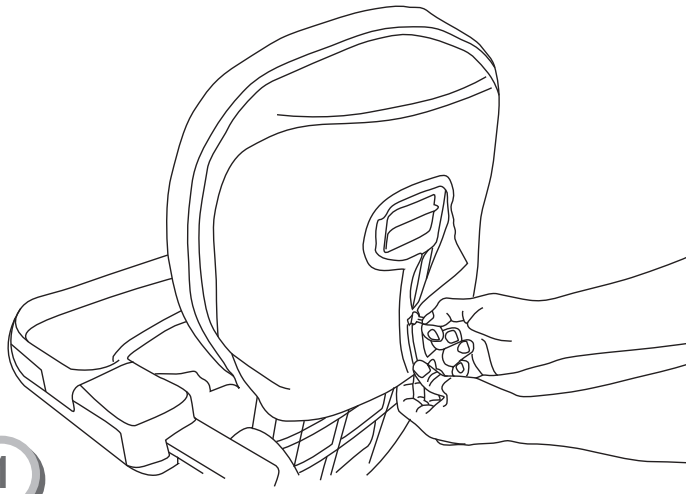

1

- To remove seat pad cover, locate the zipper on the back of backrest
- Pull the zipper down to remove the seat pad cover from the seat pad

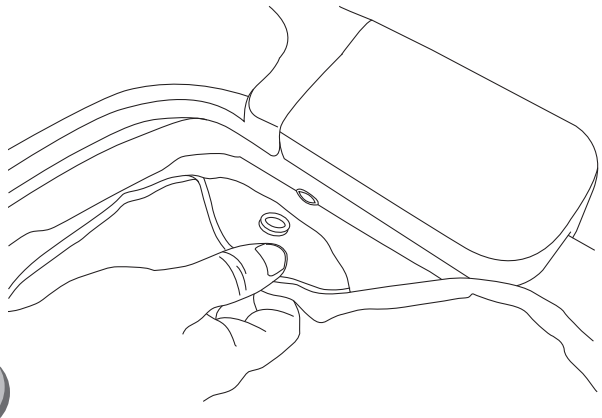

4

- Release the snap that attached seat pad to the high chair seat.
- Repeat this process till you release all the snaps.

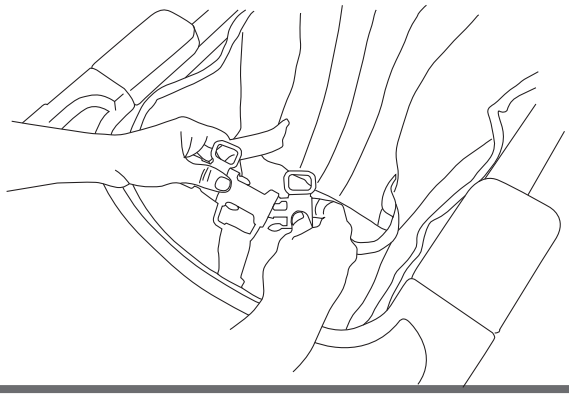

2

- Unfasten the restraint harness. Feed shoulder straps through seat pad openings.

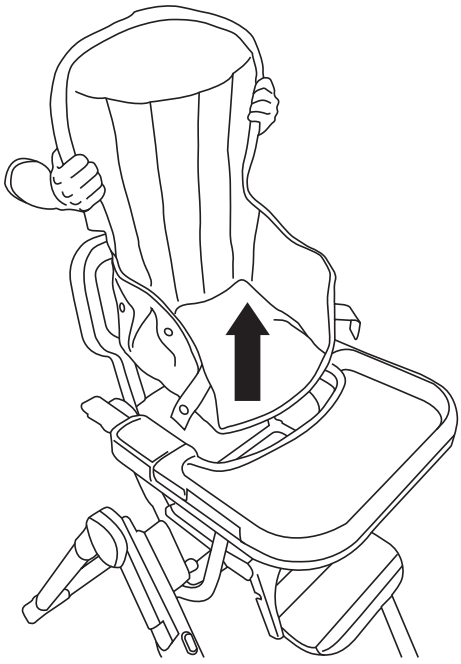

5

- Pull up the seat pad from the high chair seat to remove.

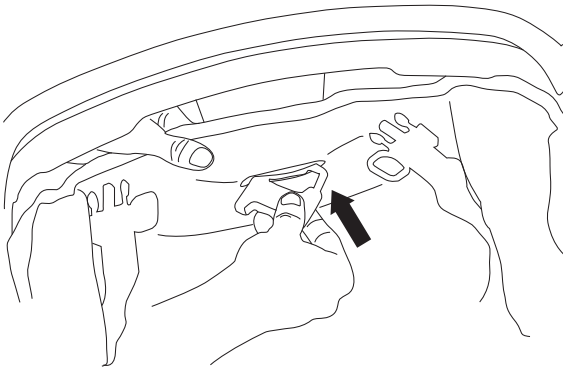

3

- Feed crotch restraint through seat bottom opening.

Securing Child

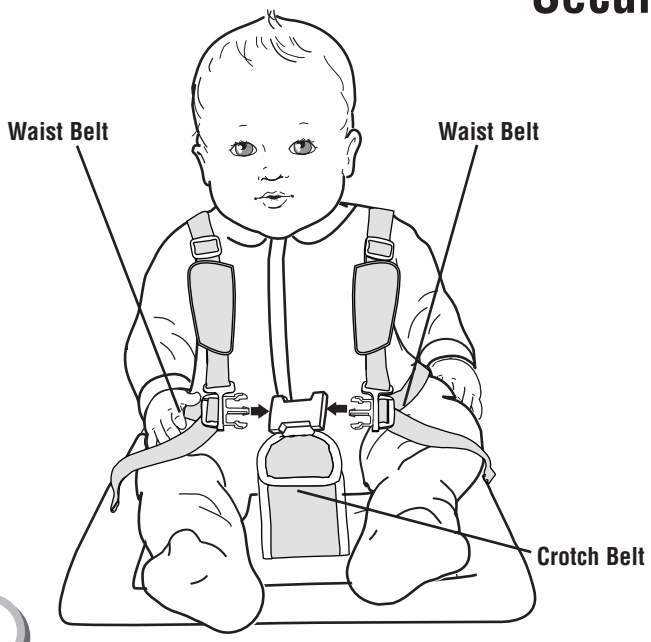

1

Securing Child

- **Place your child in the stroller. Position the crotch belt between your child's legs.**
- **Pull shoulder straps over child's arm and shoulder and fasten both strap**
  ends to the restraint system.
- **Fasten both waist belts to the buckle on each side of the crotch belt.**
  Make sure you hear a "click" on both sides.
- **Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.**

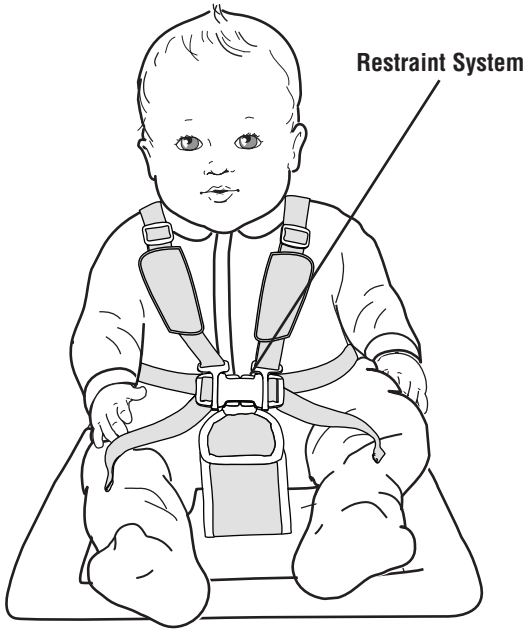

2

- **Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.**
  Please refer to the next section for instructions to tighten the waist belts.

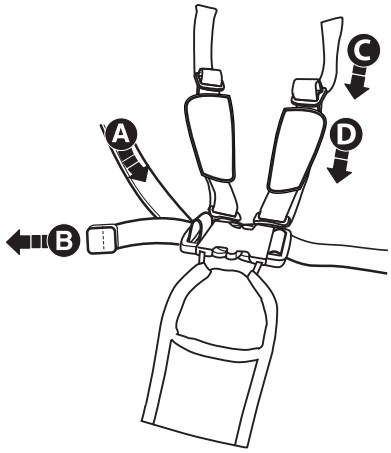

TIGHTEN

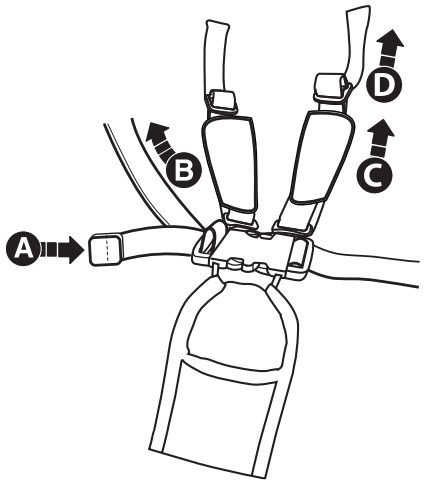

3

LOOSEN

To tighten the waist belts and shoulder straps:

- **Feed the anchored end of a waist belt up through the buckle to form a loop A. Pull the free end of the waist belt B.**
- **Repeat this procedure to tighten the other waist belt.**
- **Feed the top end of the shoulder strap through the plastic stay to form a loop C. Pull the bottom end down to tighten the strap D.**
- **Repeat this procedure to tighten the other shoulder strap.**

To loosen the waist belts and shoulder straps:

- **Feed the free end of the waist belt up through the buckle to form a loop A. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt B.**
- **Repeat this procedure to loosen the other waist belt.**
- **Feed the bottom end of the shoulder strap through the plastic stay to form a loop C. Pull the top end up to loosen the strap D.**
- **Repeat this procedure to loosen the other shoulder strap.**

NOTE: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

CARE:

- **Ensure all locking devices work correctly and regularly check the locks and fittings for security.**
- **Regularly check all parts for wear and tear.**

CLEANING:

- **For best results insert tray can be machine washed.**
- **For best results tray can be hand washed using a damp cloth and mild detergent.**
- **Seat pad should be hand washed using a damp cloth and mild detergent.**

Manufactured for and distributed by:

Delta™ Children's Products

114 West 26th Street, New York, NY 10001

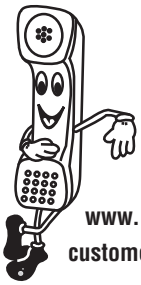

Customer Service
Tel. 1-(800)-377-3777
www.DeltaChildrensProducts.com
customerservice@DeltaChildrensProducts.com

MADE IN CHINA