


Read all instructions before assembly and use. **KEEP INSTRUCTIONS FOR FUTURE USE**.

#### ▲ ADULT ASSEMBLY REQUIRED

Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete.

#### 6 Drawer Dresser

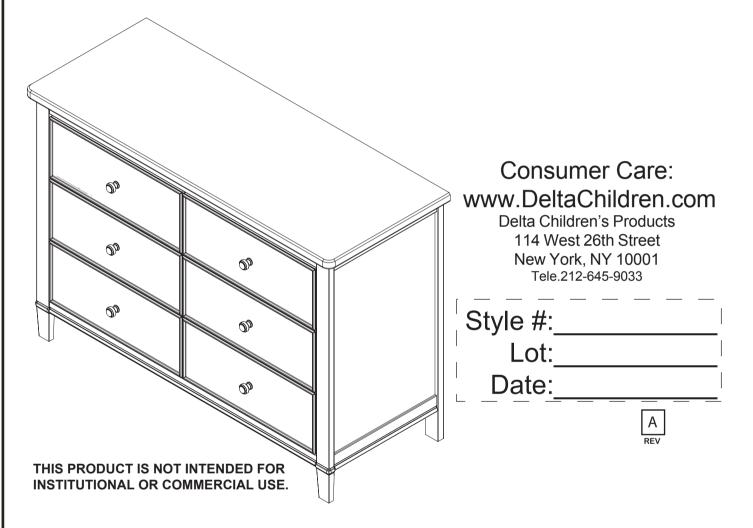

When contacting Delta Consumer Care please reference the above information. Before contacting Delta Consumer Care please ensure that the information above matches the information found on the label on

the Back Panel please reference the information found on the product when contacting Delta Consumer Care.

To register your product for important safety alerts and updates to your product please visit www.DeltaChildren.com and click on Product Registration.

### **A** WARNING

#### Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Place heaviest items in the lowest drawers.
- •Unless specifically designed to accommodate, **do not** set TV's or other heavy objects on the top of this product.
- •Never allow children to climb or hang on drawers, doors, or shelves.
- •Never open more than one drawer at a time.

#### Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.


- ·Always monitor your child's activity when in the nursery.
- •Do not allow standing in drawers.
- •Do not allow standing on top of this product.
- -Accessory Items must be securely fastened to this product according to the instructions provided with those items.
- •To avoid head injury, do not allow children to play underneath open drawers.
- Do not leave drawers open when not in use.


#### **NOTES ON ASSEMBLY:**

- -During the assembly process whenever using screws or bolts, check each by placing the screw/bolt on the diagram of the item which is drawn actual size and design. Be sure to use the proper size and shape specified in the instructions
- -To assemble this unit you may be required to place the unit on it's side and face. It is strongly recommended that assembly is done on a soft, non-abrasive surface to avoid damaging the finish.


#### **NOTES ON CARE AND MAINTENANCE:**

- **Do not** scratch or chip the finish.
- Inspect the product periodically, contact delta children's products for replacement parts or questions.
- **Do not** store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- -To preserve the luster of the high quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- -Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- -Do not use abrasive chemicals.
- -Do not spray cleaners directly onto furniture.
- -Lift slightly when moving on carpeting to prevent leg breakage.
- -Use of a vaporizer near furniture will cause wood to swell and finish to peel.

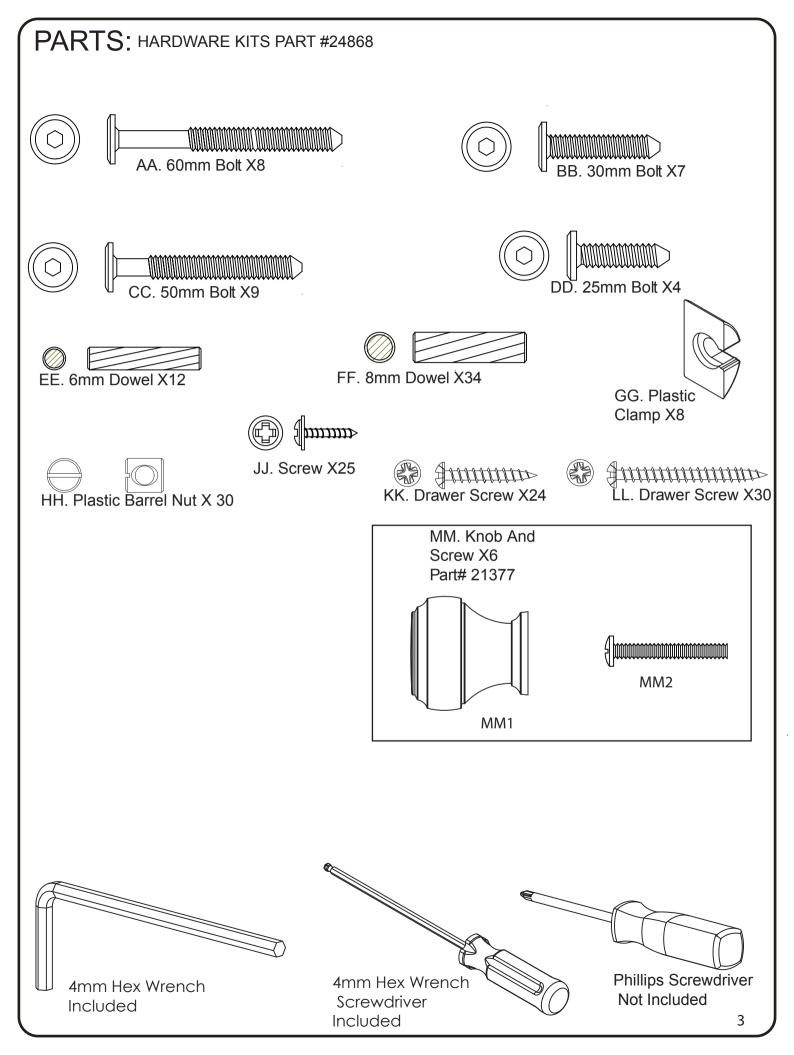


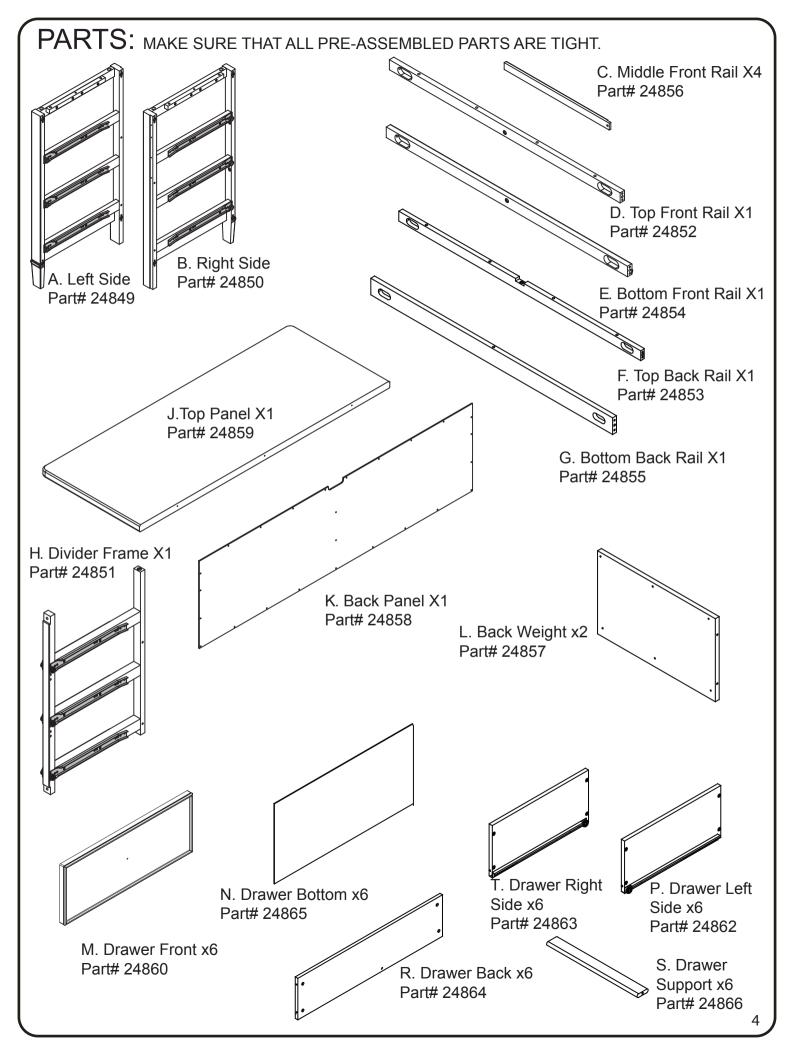


### HARDWARE SYSTEM - REVIEW BEFORE ASSEMBLY

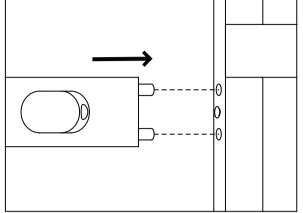


2. Align the bolt with the hole in the end of the rail, align the dowels in the end of the rail with the with the holes in the post. Slide together until tight.

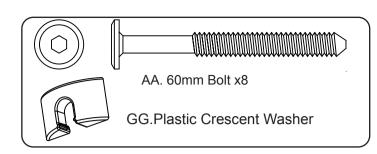


1. Insert the Dowels in the Rail into the holes in the Post.

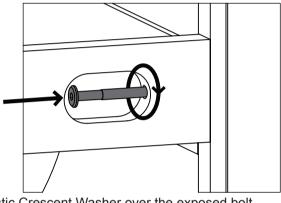


3. Slide the Plastic Crescent Washer over the exposed bolt, behind the head of the bolt. Tighten the bolt with the M4 Hex Wrench Screwdriver provided.

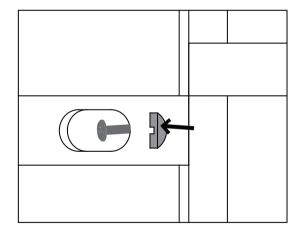


Install (1) bolt and (1) crescent washer at a time. Tighten until it looks like the picture.

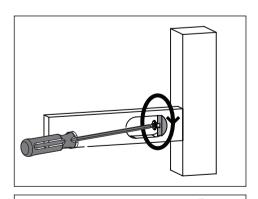


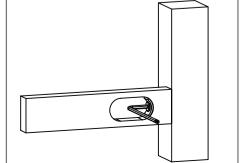

Using the M4 Hex Wrench Ensure all bolts are tightened.


### STEP 1:

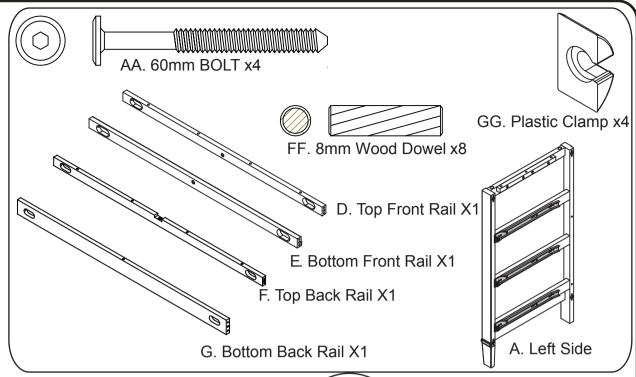

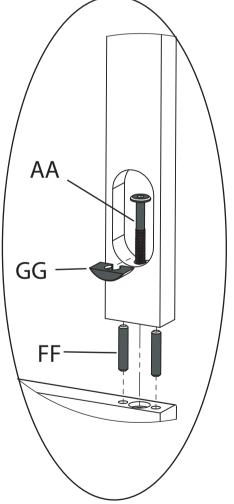


Attach Top Front Rail (Part D), Bottom Front Rail (Part E), Top Back Rail (Part F) and Bottom Back Rail (Part G) to Left Side (Part A) using(8) 8mm Dowels (Part FF), (4) 50mm Bolts (Part CC) and (4) Plastic Clamps (Part GG)following the direction on page 5. Ensure that the slots on the rails face the inside.


Tighten all Bolts with the Hex Wrench.

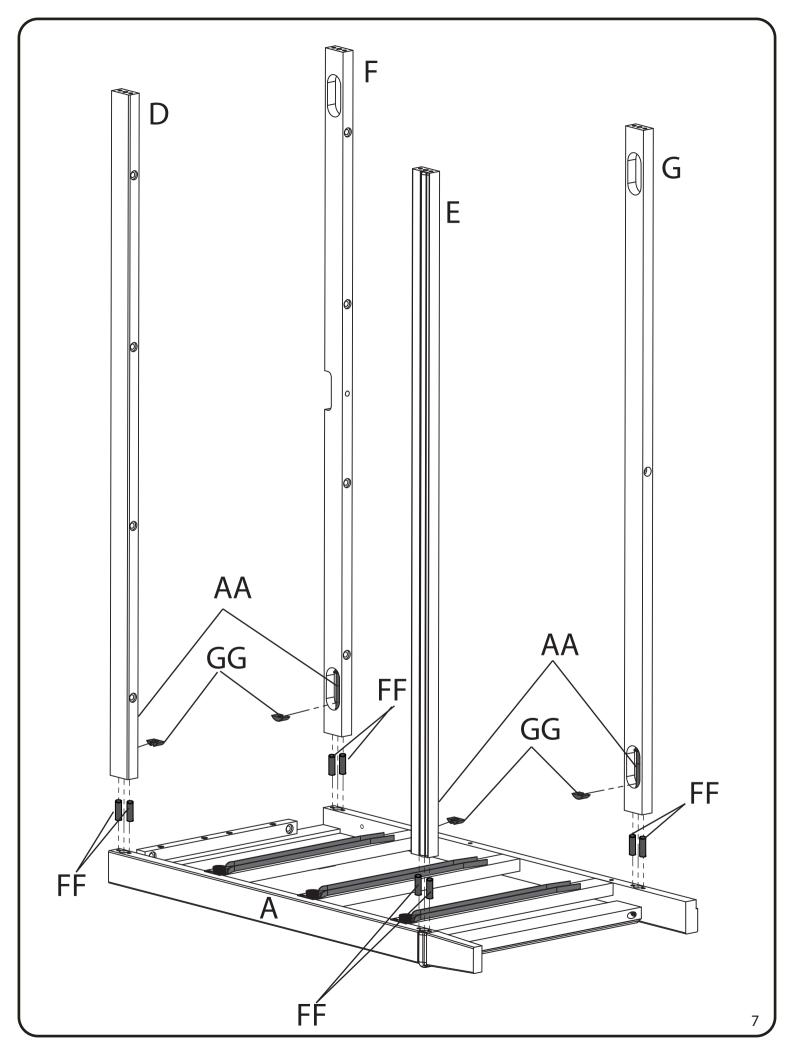


# STEP 2:

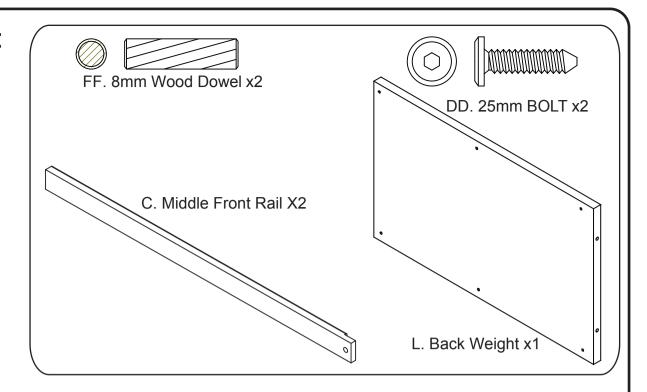


Install (2) Middle Front Rails (Part C) using (2) 25mm Bolts (Part DD). Tighten all Bolts with the Hex Wrench. Then using (2) 8mm Dowels install the Back Weight (Part L).

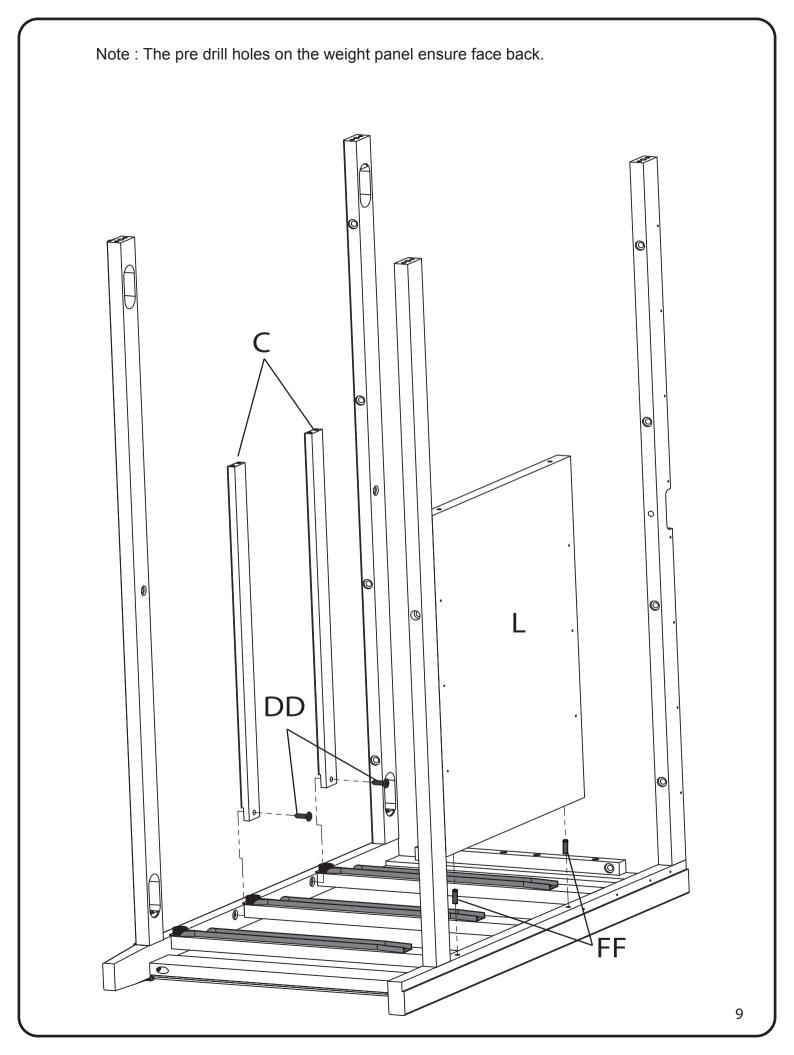




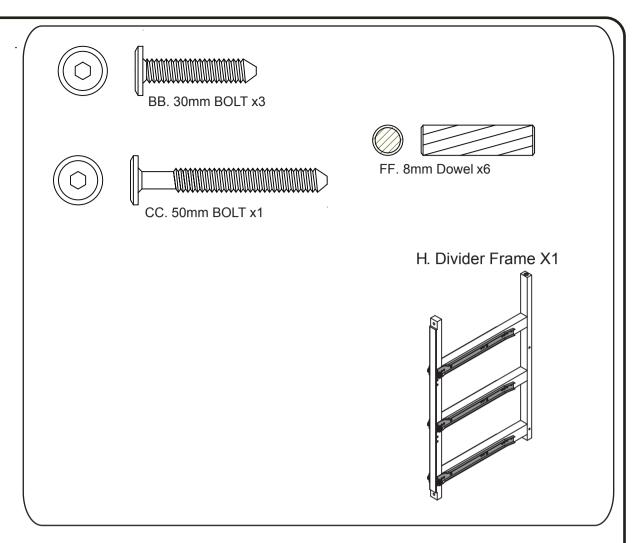


Insert the Divider Frame (Part H) into the (2) Middle Front Rails and Bottom Back Panel using (6) 8mm Dowels (Part FF), (1) 50mm Bolt (Part CC) and (3) 30mm Bolts (Part BB). Tighten all bolts with the Hex Wrench.

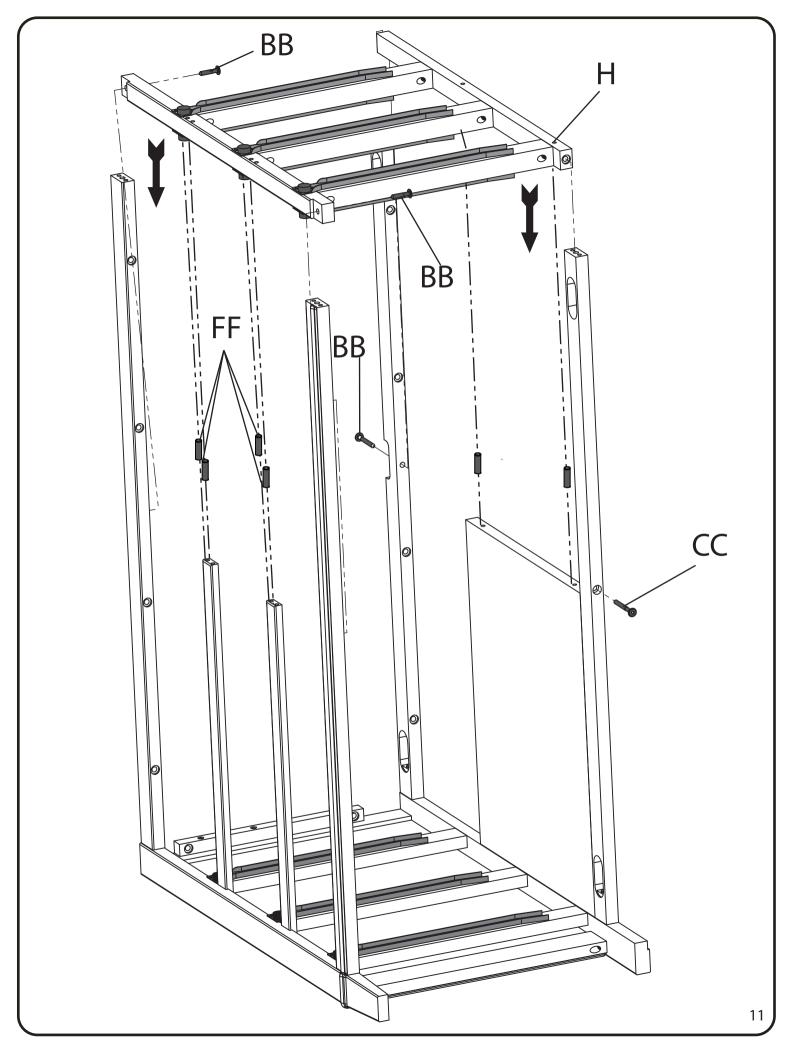


# STEP 4:

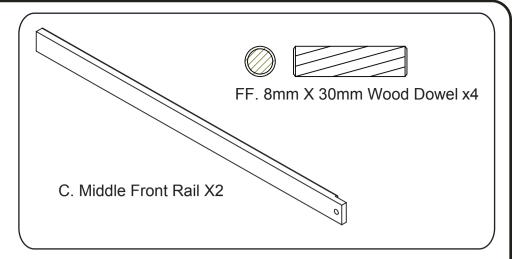


Install (2) Middle Front Rails (Part C) using (4) 8mm Dowels (Part FF).

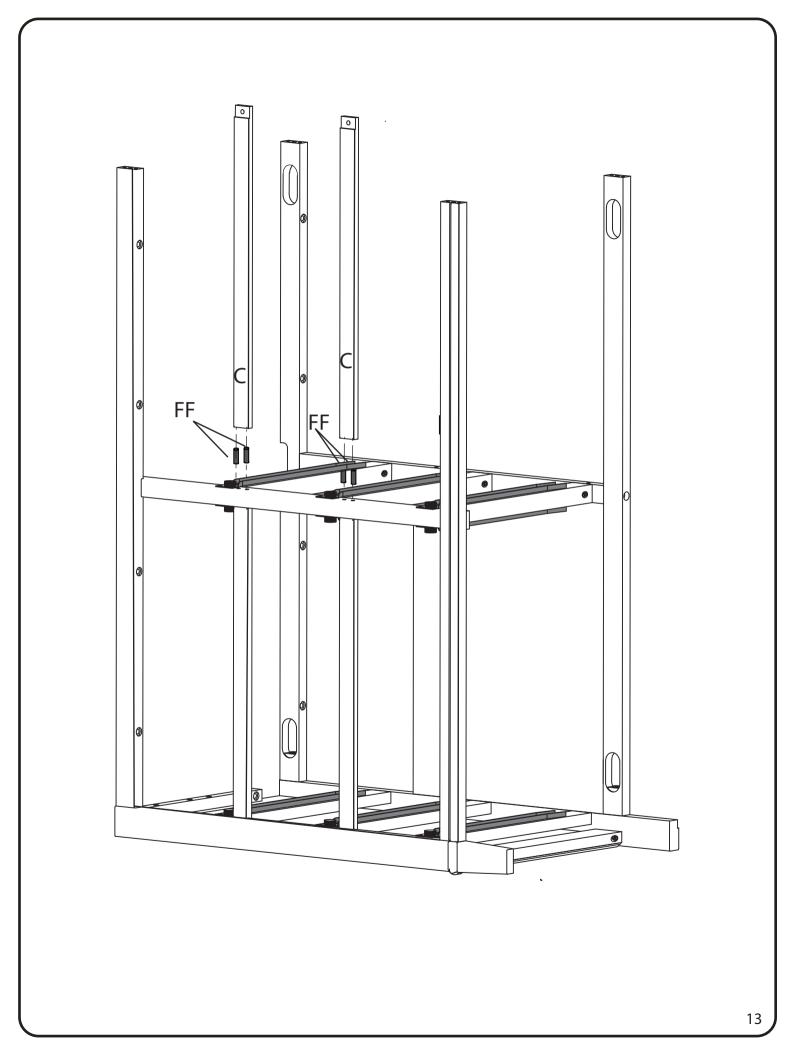


# STEP 5:

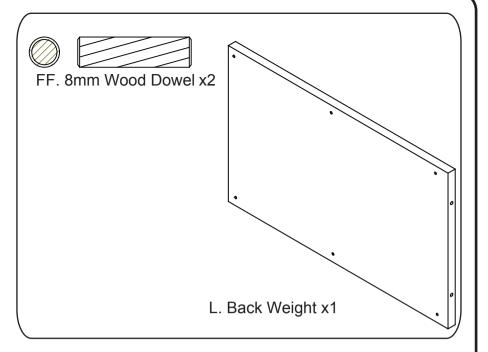


Install (1) Back Weight (Part L) using (2) 8mm Wood Dowels (Part FF).

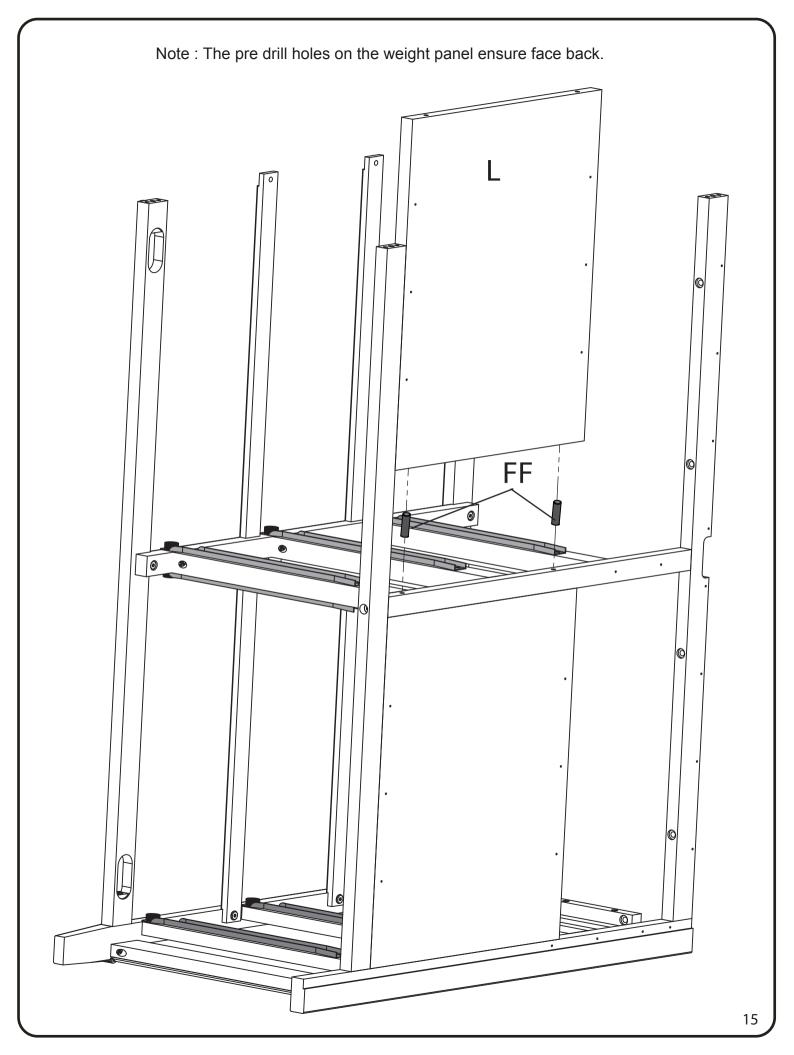


	$\mathbf{\nu}$	h'
$\cup$		U.




Install (10) 8mm Dowels (Part FF) into the Top Front Rail (Part D), Bottom Front Rail (Part E), Top Back Rail (Part F), Bottom Back Rail (Part G), and the Back Weight (Part L).

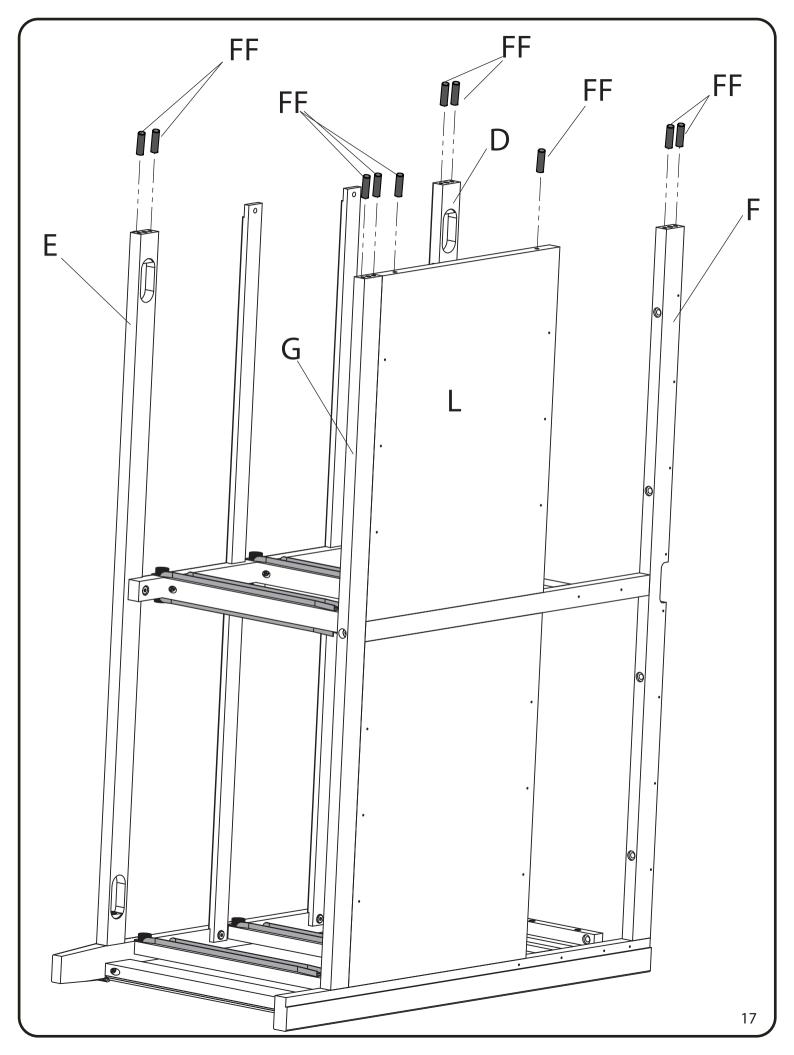


### STEP 7:

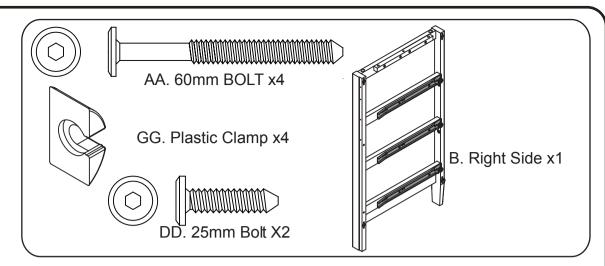


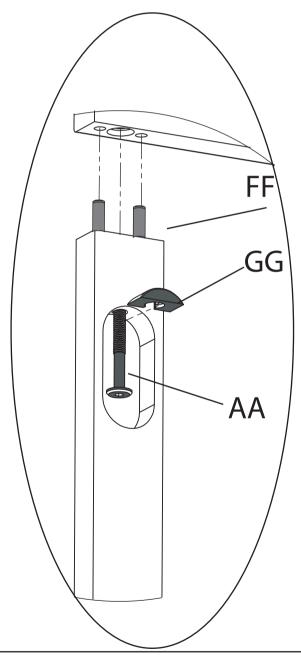


Attach the Right Side by aligning the Right Side (Part B) with the installed Dowels from the previous step and using (4) 60mm Bolts (Part AA), (4) Plastic Clamp (Part GG) and (2) 25mm Bolts (Part DD) following the direction on page 5. Tighten all bolts with the Hex Wrench.

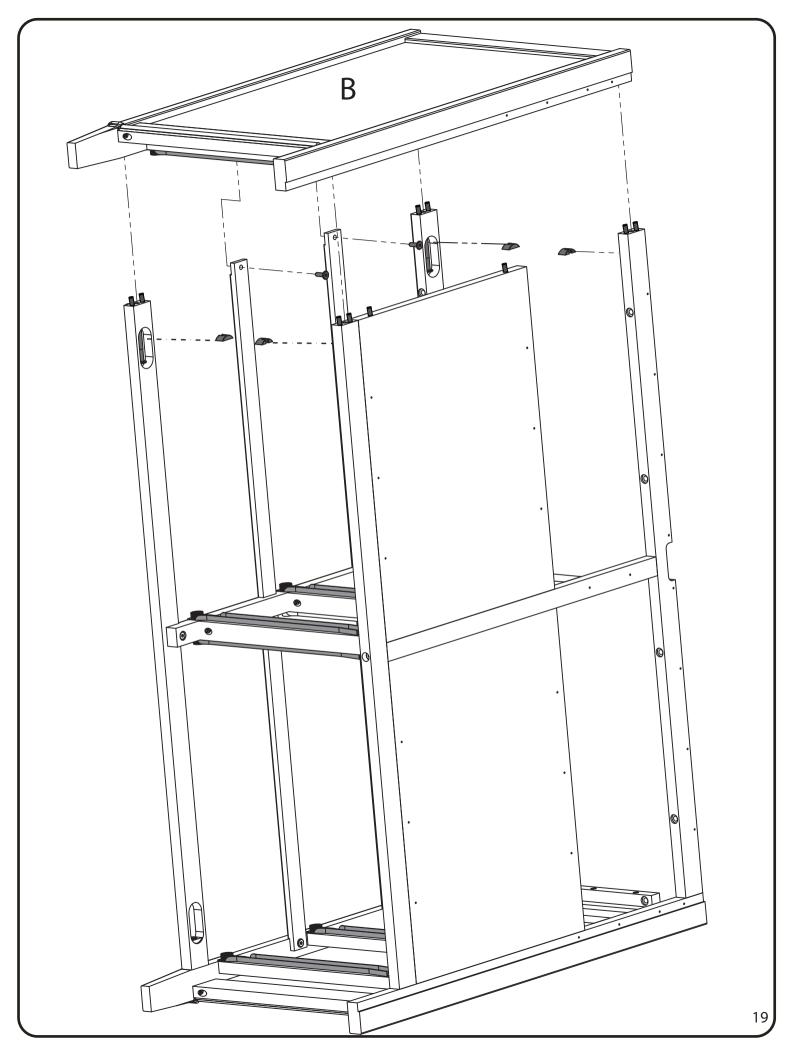


### STEP 8:

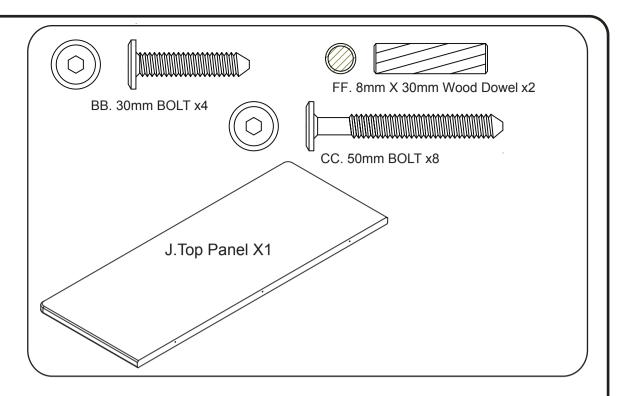


Attach the Top Panel (Part J) to the Case using (2) 8mm Dowels (Part FF) (8) 50mm Bolts (Part CC) through the Top Front and Back Rails, then install (4) 30mm Bolts (Part BB) through the sides. Tighten all bolts with the Hex Wrench.

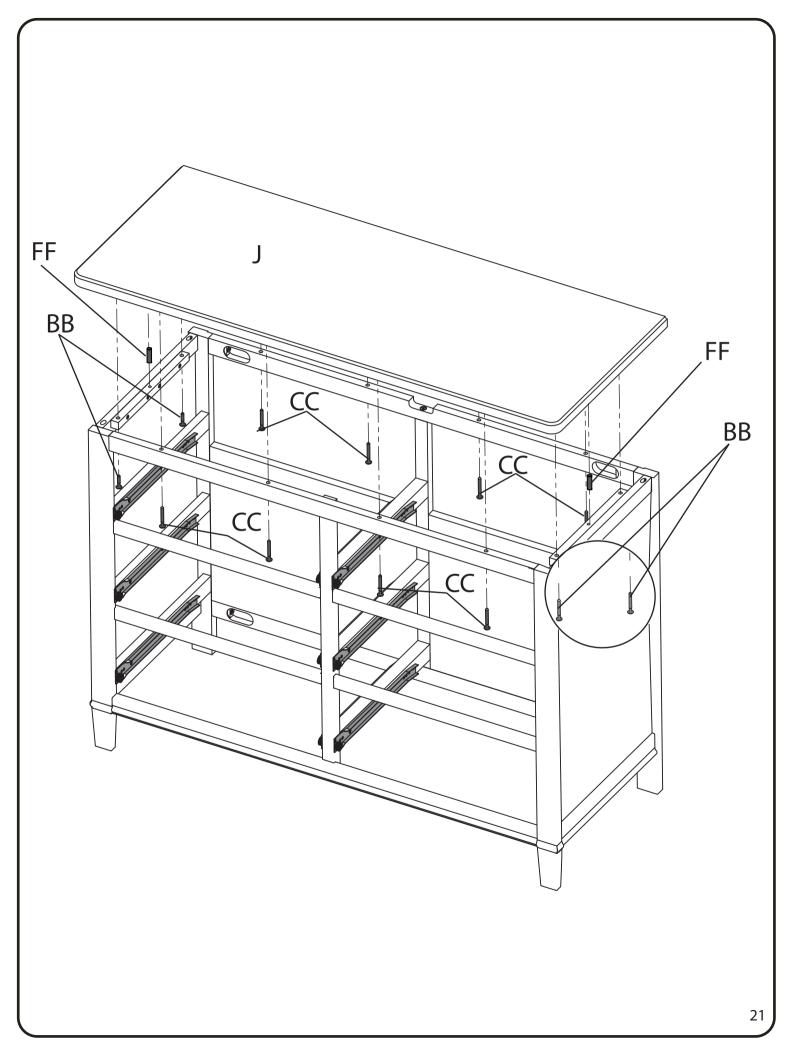


# STEP 9:

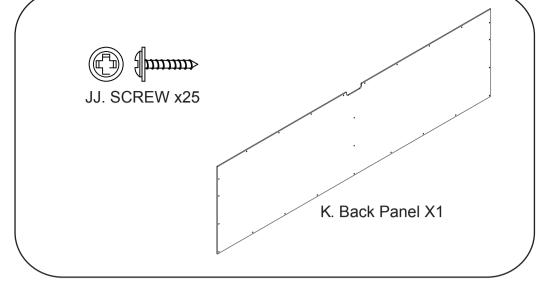

Attach Back Panel (Part K) using (25) Screws (Part JJ). Tighten with a Phillips Screwdriver.

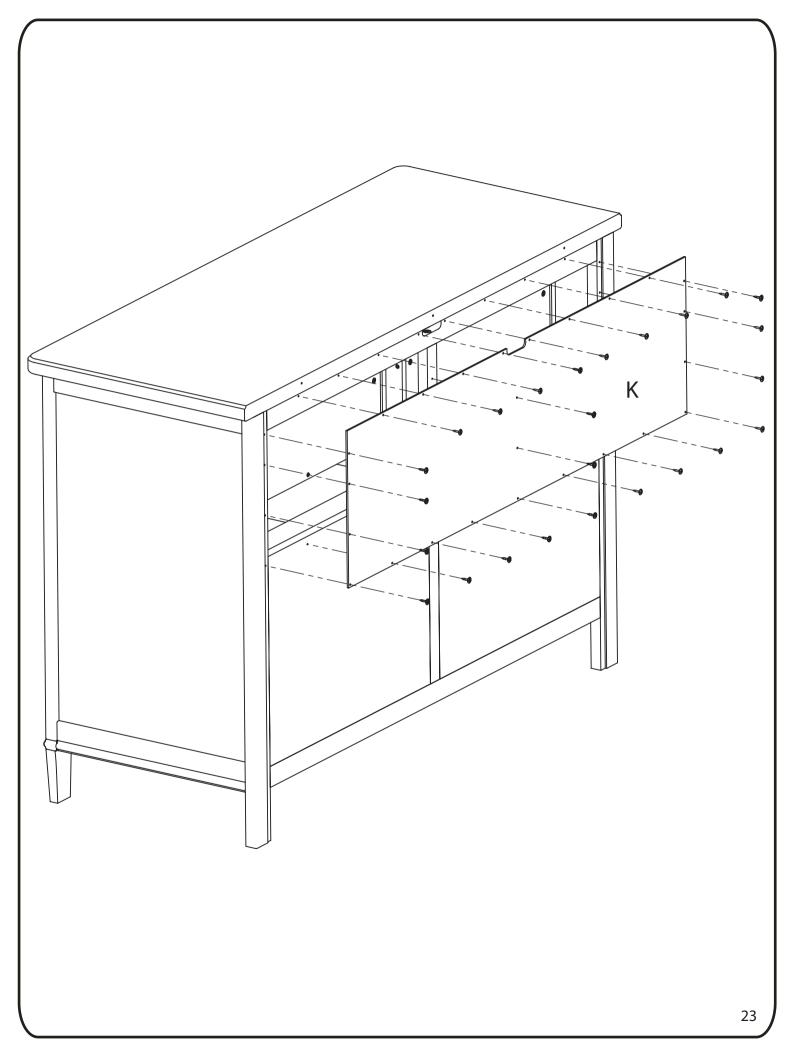



# STEP 10: Drawer Assembly

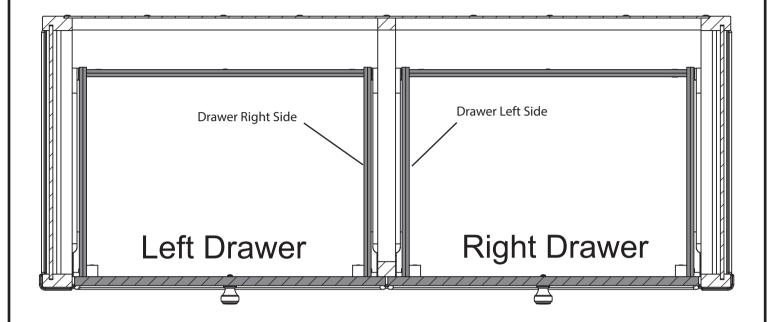


View from above of correctly assembled and installed drawers, the top and top front rail have been removed for clarity.

Also note Drawer Fronts have a Wide Side and a Narrow Side, and also a groove on the top and bottom for the drawer panel. Please watch as you assemble so the wide side ends up in the middle of the case.

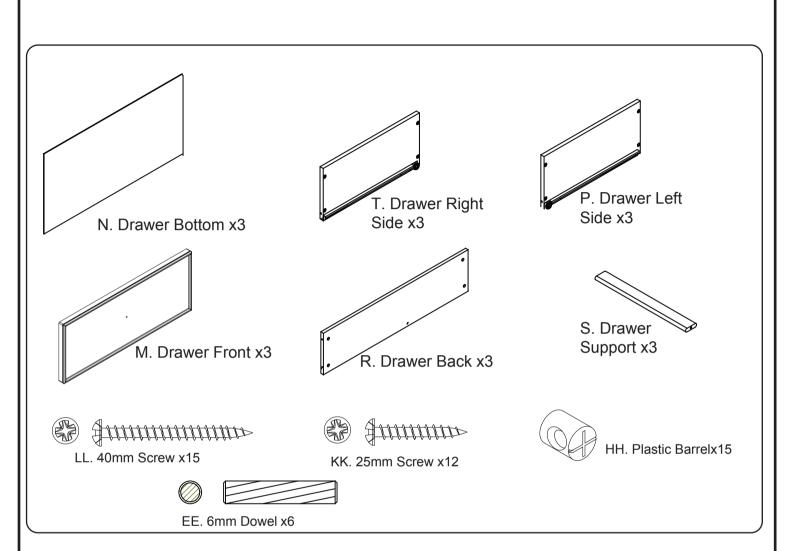


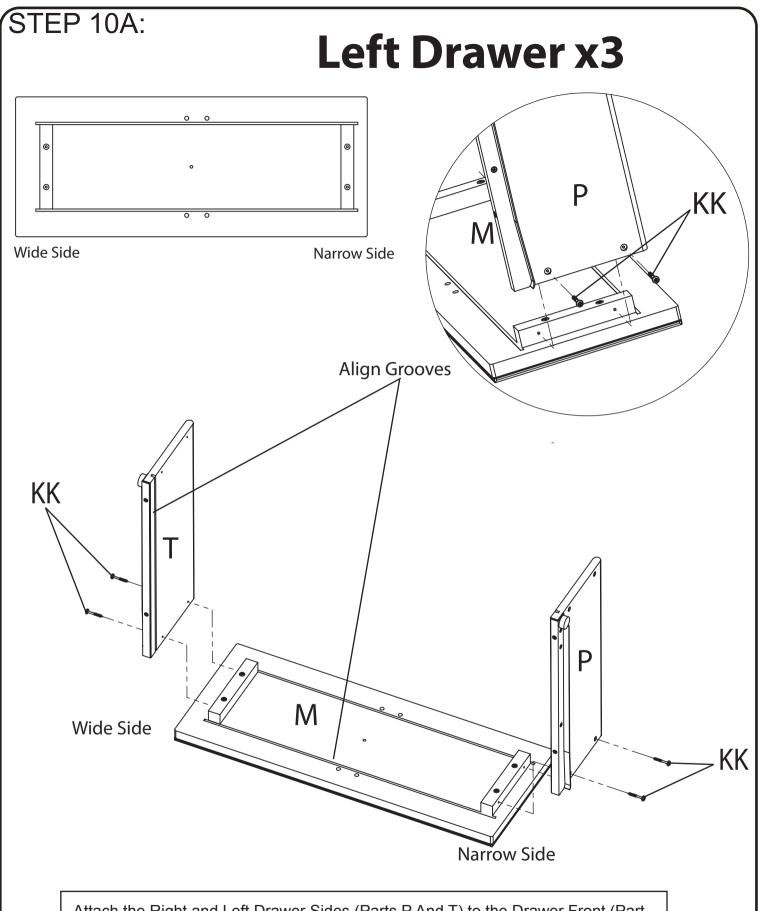



Attach the Right and Left Drawer Sides (Parts P And T) to the Drawer Front (Part M) with (4) 25mm Screws (Part KK) Note: Grooves In Bottom Must Align. Loosely Tighten With Phillips Screwdriver

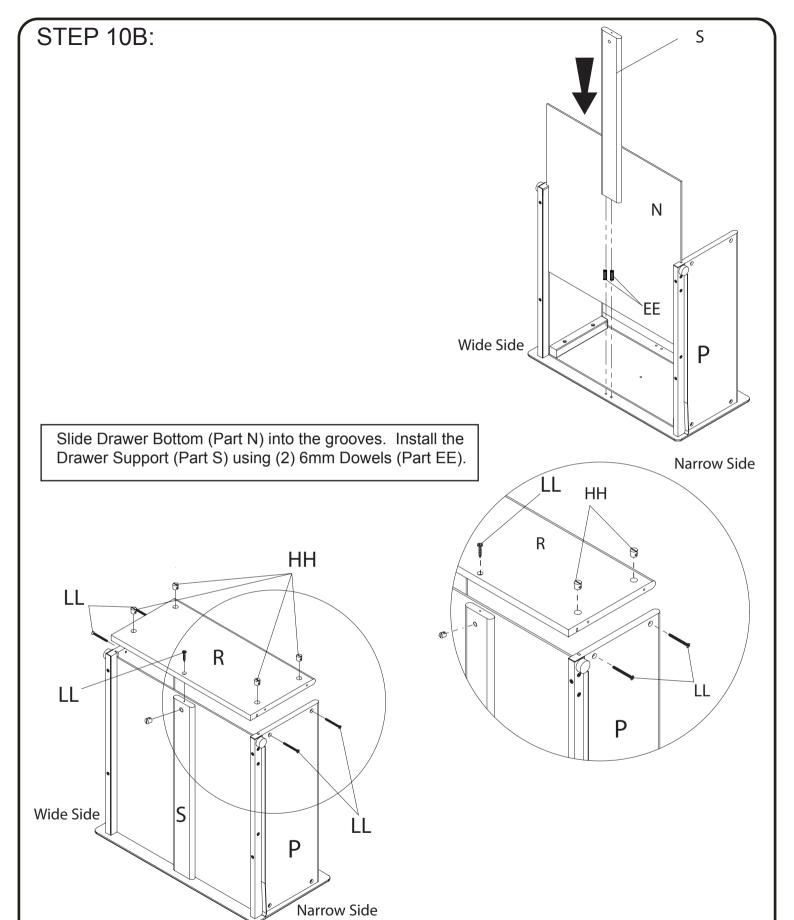


Install the Drawer Support (Part S) and Drawer Back (Part R), using (5) 40mm Screws (Part LL) and (5) Plastic Barrel Nuts (Part HH). Note: Grooves In Bottom Must Align.
Tighten All Screws With Phillips Screwdriver.

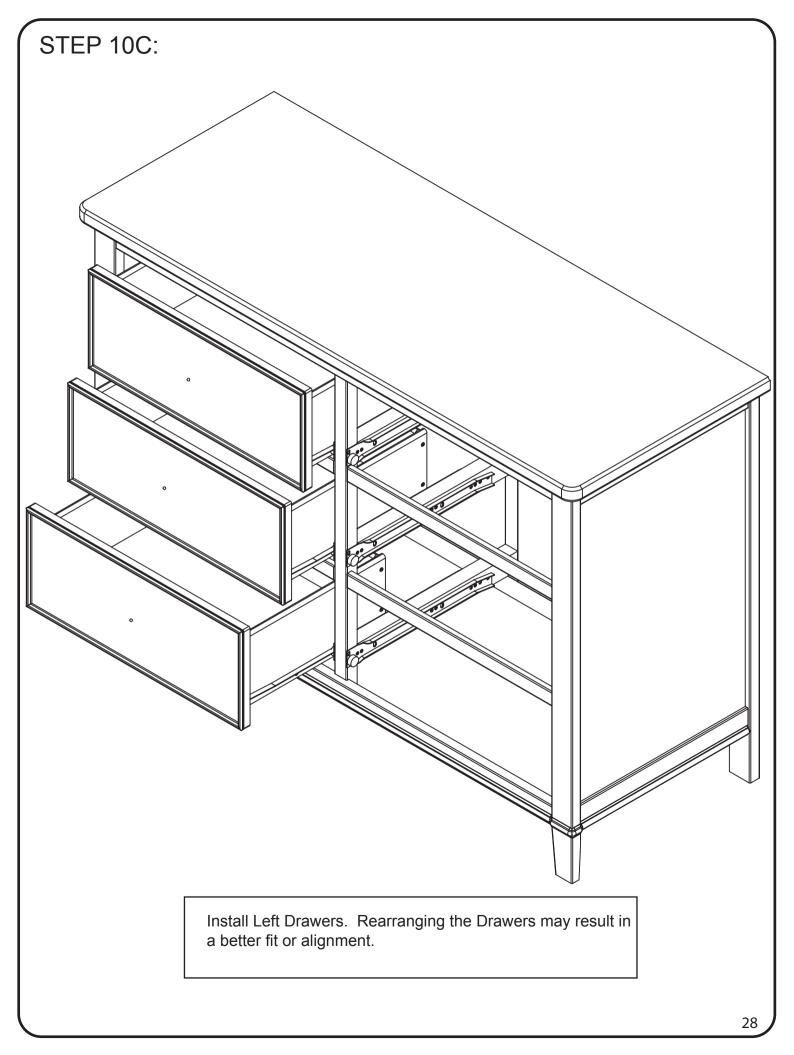


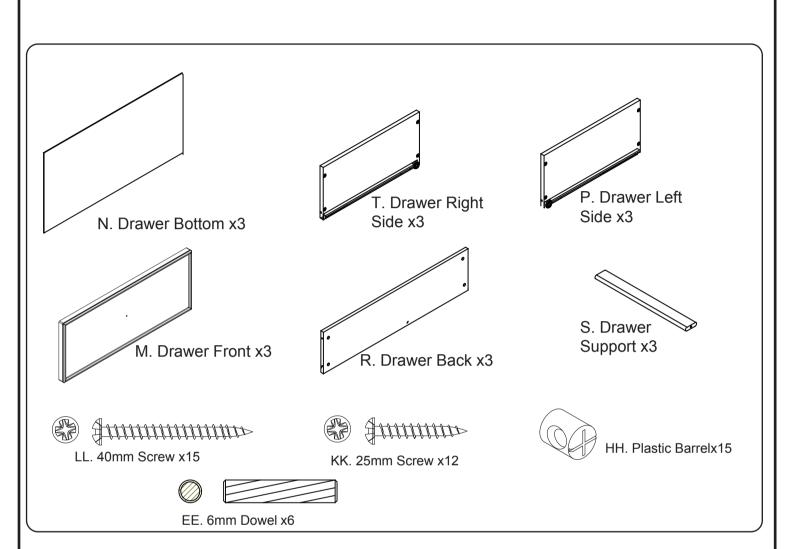


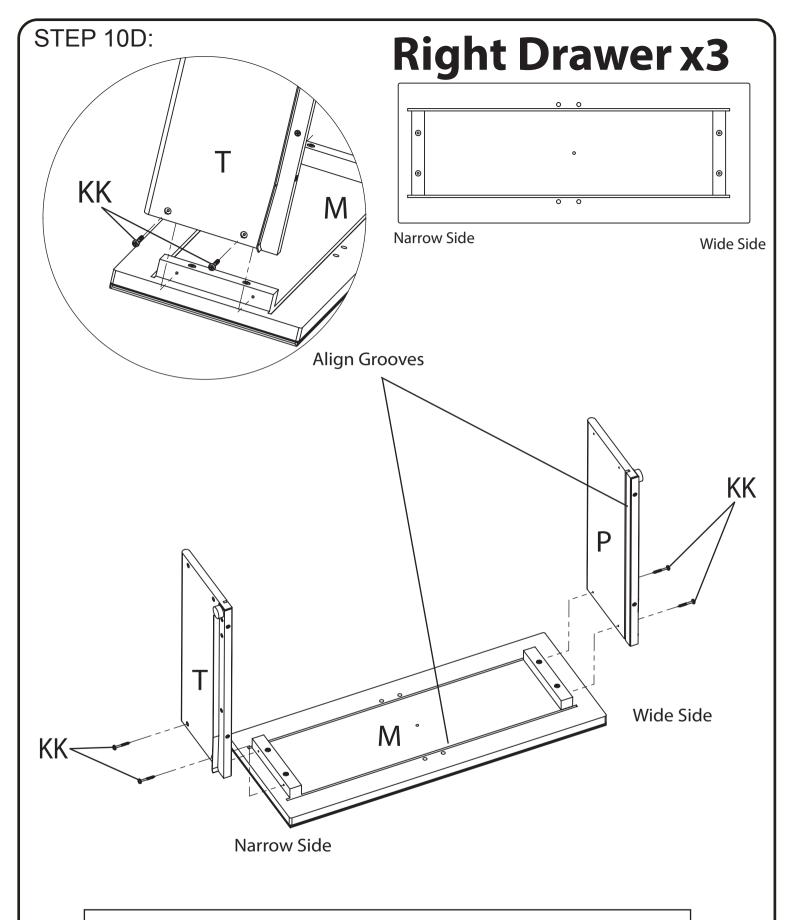

Attach the Right and Left Drawer Sides (Parts P And T) to the Drawer Front (Part M) with (4) 25mm Screws (Part KK) Note: Grooves In Bottom Must Align. Loosely Tighten With Phillips Screwdriver

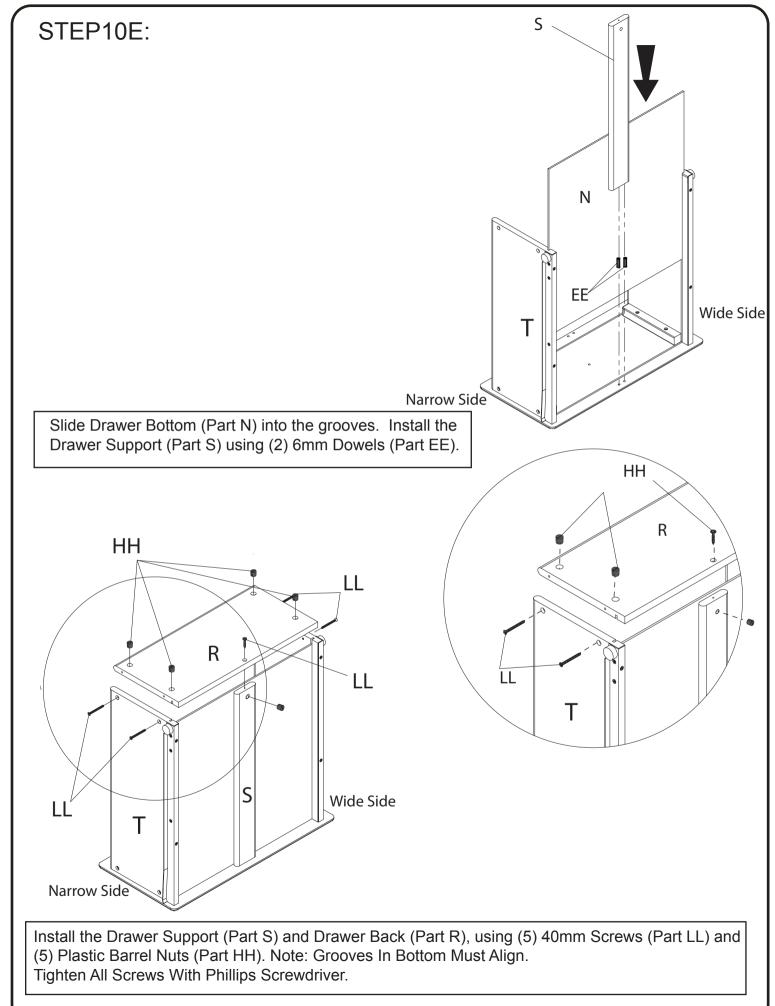

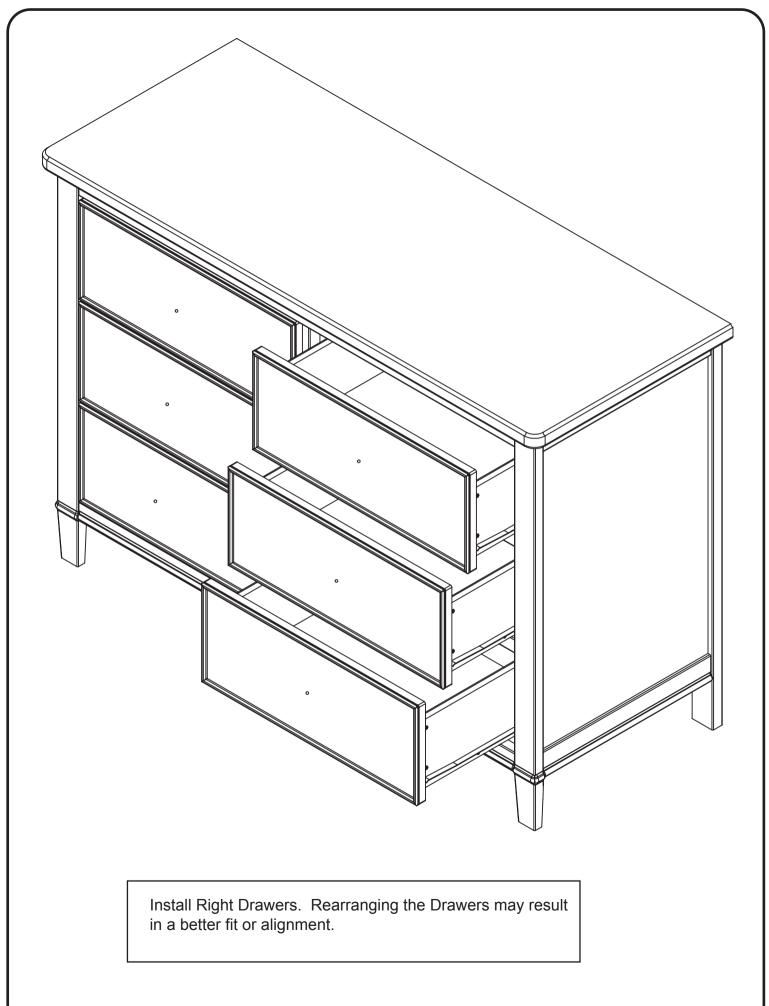

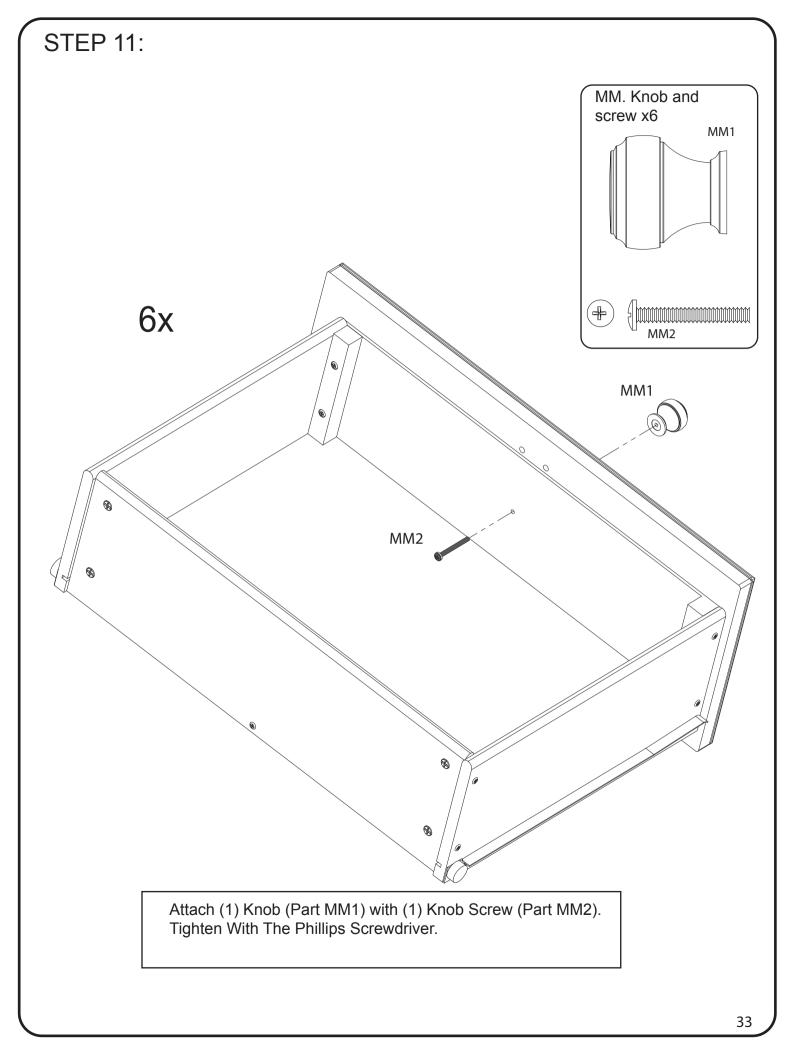



# Consumer Care: www.DeltaChildren.com

Delta Children's Products 114 West 26th Street New York, NY 10001 Tele.212-645-9033

**Warranty:** This Delta Crib is warranted to be free from defects for a period of 1 year from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta.

To register your product for important safety alerts and updates to your product please visit www.DeltaChildren.com

Please do not return this item to the store before contacting us about missing parts or with any questions.

To report a problem, please log on to **www.DeltaChildren.com** and click the Consumer Care Tab, or contact us by phone at (212) 645-9033.

In the event that you need to contact our customer service department please have the Style Number and Lot Number available. Use the space below to make note of those numbers. They can be found on the label on the Back Panel.

<b>STYLE No: 79706</b>		A
	COLOR	REV
Lot No. :		-
Pack Date:		
Date of Purchase:	(y	ou should also keep your receipt)